



Configuration of DN-X1600 with MAC Audio/MIDI Setup (OSX 10.5.x)

- On the MAC, go to **Applications > Utilities > Audio MIDI Setup**
- **Select DN-X1600 in "Default Input" column.**
- **Select DN-X1600 in "Default Output" column.**
- **Select Format Frequency same as "SystemSetting" in DN-X1600's Utility settings**
- **Select 8ch-24bit value in "Format CH"**

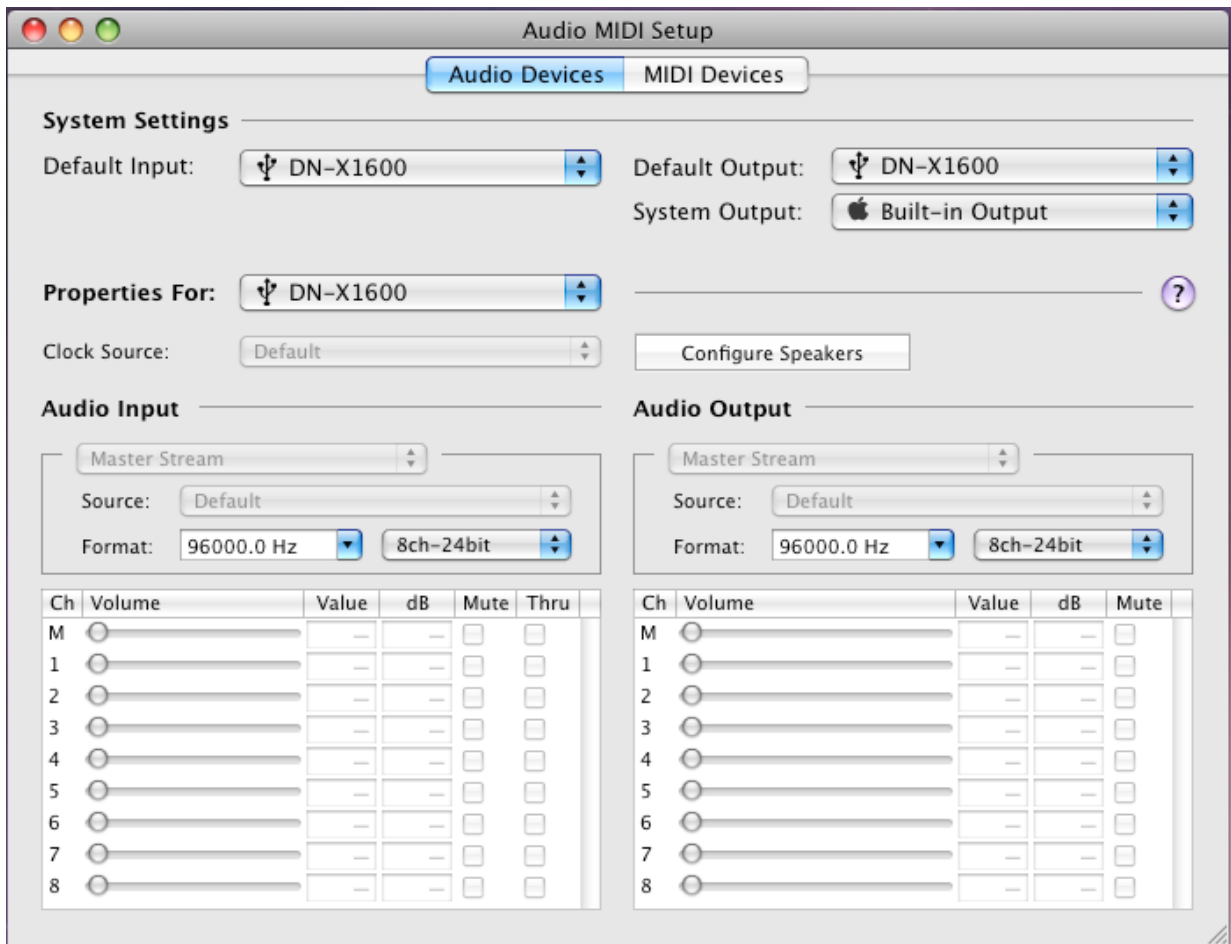

Configuration of DN-X1600 with MAC Audio/MIDI Setup (OSX 10.6.x)

- On the MAC, go to **Applications > Utilities > Audio MIDI Setup**
- **Show Audio Window**
- **Select DN-X1600 on left window and mouse right button push.**
- ① **Select “Use this device for sound input”.**
- ② **Select “Use this device for sound output”.**

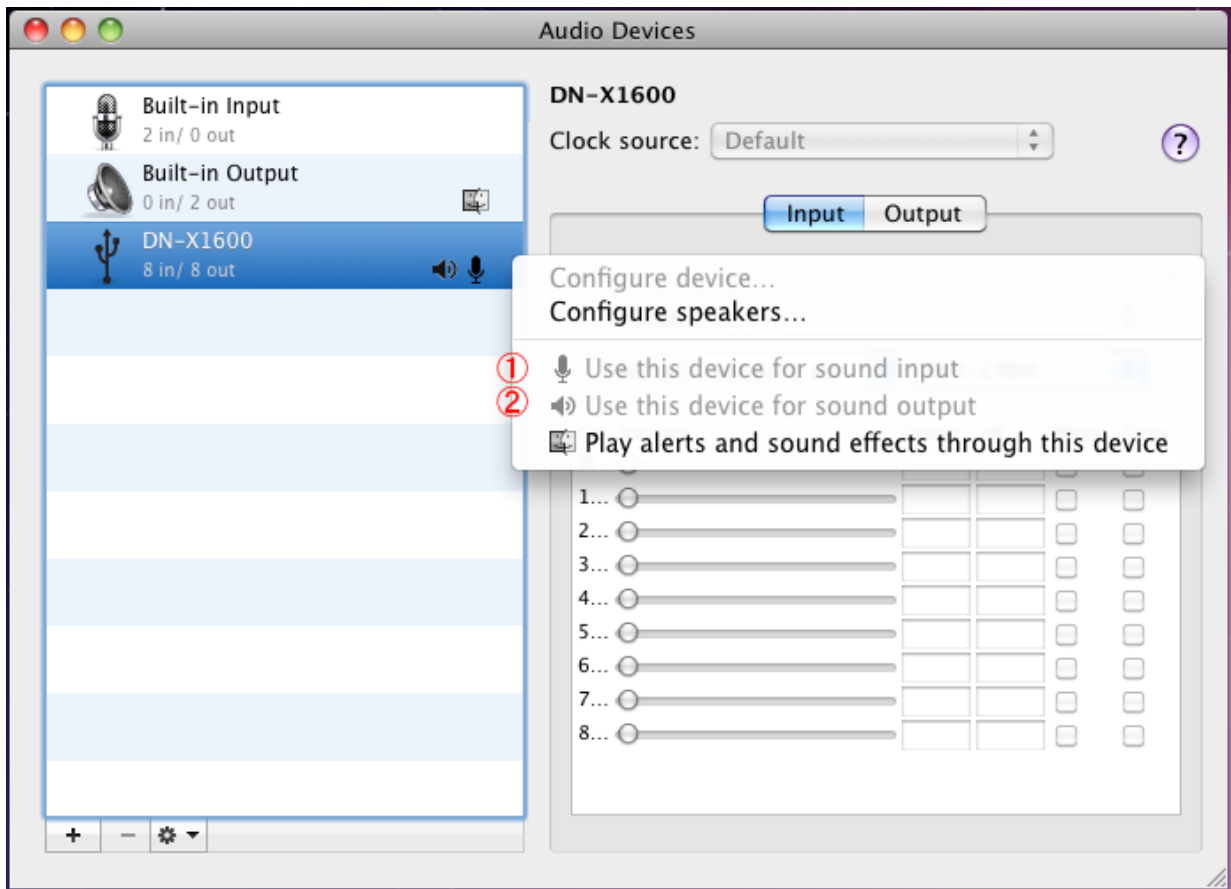

- ③④ **Select Format Frequency same as “SystemSetting” in DN-X1600’s Utility settings**
- ③④ **Select 8ch-24bit value in “Fomat CH”**

