

Denon DN-C640 Update

System v1.33 & Drive v1.004

2.2 Microcomputer Firmware Update (v.1.33)

1. Extract the update file folder.
2. You will obtain the .bin update file after extracting the folder.
3. Burn the .bin file to a CD-R using ISO9660, Mode 1, and Disc At Once.
4. Insert CD-R with Version Up file (DNC640up.bin) to start Update.
5. LCD displays "F/W Update" for one second, then displays "X-X.XX_OK?". The "OK?" display flashes. The version number displayed on the LCD is the version number to be updated.
6. Pressing the **jog wheel** while "X-X.XX_OK?" is displayed executes the update (note, pressing the **STOP/CANCEL** button while "X-X.XX_OK?" is displayed initiates normal launch without executing the update).
7. During update, the "Update" display flashes.
8. Normal launch will be initiated if Version UP file version and installed version are the same.
9. The microcomputer is automatically reset and re-launches. *It may not work properly if the power is turned off during update causing damage to the files in the memory.

2.4 DVD-ROM Drive Firmware Update (v1.004)

1. Extract the update file folder.
2. You will obtain the .bin update file after extracting the folder.
3. Burn the .bin file to a CD-R using ISO9660, mode 1, and Disc At Once.
4. Insert CD-R with Version Up file to start Update.
5. LCD displays "Drive Update" for one second, then displays "Drive_OK?". The "OK?" display flashes.
6. Pressing the **jog wheel** while "Drive_OK?" is displayed executes the update (note, pressing the **STOP/CANCEL** button while "Drive_OK?" is displayed initiates normal launch without executing the update).
7. During update, the "Update" display flashes.
8. The CD-R disc is automatically ejected after Update.
9. "Drive Success" displays on LCD for one second, and then the power turns off automatically. *It may not work properly if the power is turned off during update causing damage to the files in the memory.

To check to the DN-C640 firmware and drive versions, please follow the steps below.

1. Power on the DN-C640.
2. Press the Shift button, then press the Menu/Store button to enter the Utility Menu.
3. Turn the Enter knob counter clockwise until Drive Version is displayed.
4. Press the Enter knob to display the current Drive version.
5. Press the Enter knob again.
6. Turn the Enter knob counter clockwise until Firmware is displayed.
7. Press the Enter knob to display the current Firmware version.