

Update Process and Verification

To update the firmware on your DN-500R:

1. Unzip the contents of the downloaded **.zip** file to your Desktop.
2. Transfer the **DN500FW.bin** file from that **.zip** file to the root directory of a USB storage device.
3. Make sure your DN-500R is securely connected to a power outlet and is powered off, and then insert the USB storage device into it.
4. Power on DN-500R.
5. DN-500R's display will show the new firmware version number. Confirm the version number is correct.
6. To continue with the update, turn the **Jog Wheel** on the front panel to select **OK**, and then press the **Jog Wheel**. *During the update process, do not power off DN- 500R or disconnect it from the power outlet. Doing so can damage the unit.*

To cancel the operation instead, turn the **Jog Wheel** on the front panel to select **Cancel**, and then press the **Jog Wheel**.

7. Allow the update process to complete, which may take approximately 1 minute. The display may go dark during this time. After the update is completed, DN-500R will automatically restart. Remove your USB storage device, and delete the **.bin** files.

Your DN-500R now has the newest firmware.

To check the firmware version on your DN-500R:

1. With the DN-500R powered on and stopped, press the **Menu** key.
2. Select **09 Utility** and press the **Jog Wheel**.
3. Select **04 Firmware Version** and press the **Jog Wheel**. The installed firmware version will appear in the display.