

Denon DN-F450R Firmware v3.01 Installation instructions

Step 1 Check the firmware version on your DN-F450R

1. Power on the DN-F450R.
2. Press and hold the **Display/Menu** button until the menu appears.
3. Turn the SELECT knob until "F/W VERSION" is displayed.
4. Press the SELECT knob to display the current version number.
5. If firmware version is lower than 3.01, power off your DN-F450R and proceed to the next step.

Step 2 Updating the firmware on the DN-F450R

1. Extract the update zip file.
2. You will obtain the **DN-F450Rup.bin** update file once extracted.
3. Drag and drop this file to any SD or SDHC card.
4. Place the card in the DN-F450R and power the machine on.
5. The machine should prompt you for the update. Select 'Yes'.
6. Press the jog wheel to start the update process.
7. Once the update is completed the machine will reboot itself.
8. Remove the update file from the card.