


Front panel

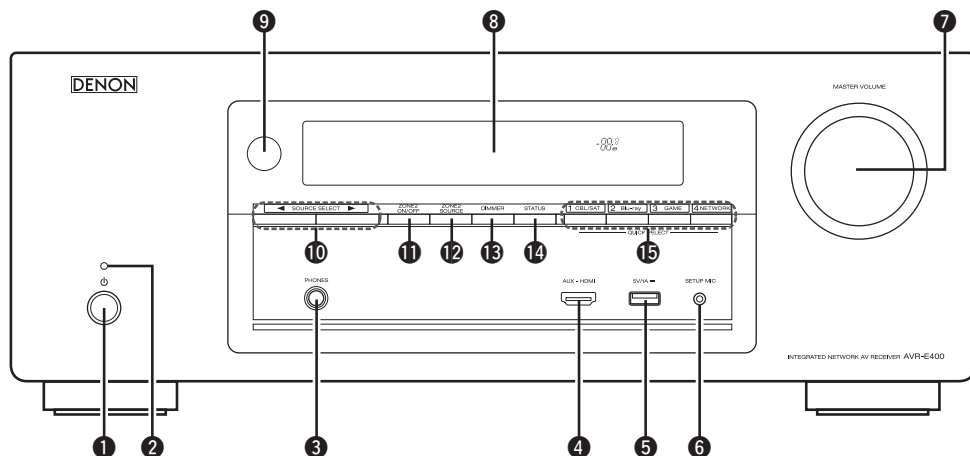

❶ Power operation button (⏻)

❷ Power indicator

❸ Headphones jack (PHONES)

❹ AUX-HDMI connector

❺ USB port

❻ SETUP MIC jack

❼ MASTER VOLUME knob

❽ Display

❾ Remote control sensor

❿ SOURCE SELECT buttons

⓫ ZONE2 ON/OFF button

⓬ ZONE2 SOURCE button

⓭ DIMMER button

⓮ STATUS button

⓯ QUICK SELECT buttons