


Front panel

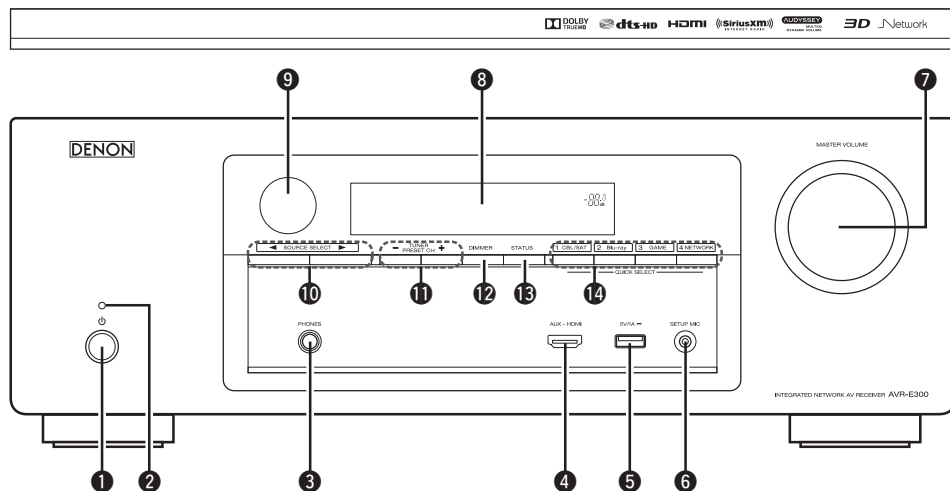

- | | |
|-------------------------------------|---|
| ① Power operation button (⏻) | ⑨ Remote control sensor |
| ② Power indicator | ⑩ SOURCE SELECT buttons (◀ ▶) |
| ③ Headphones jack (PHONES) | ⑪ Tuner preset channel buttons
(TUNER PRESET CH +, -) |
| ④ AUX-HDMI connector | ⑫ DIMMER button |
| ⑤ USB port | ⑬ STATUS button |
| ⑥ SETUP MIC jack | ⑭ QUICK SELECT buttons |
| ⑦ MASTER VOLUME knob | |
| ⑧ Display | |