


Firmware Update Instructions

To update the firmware on your DN-508MXA:

1. Download the latest **.bin** firmware update file from denonpro.com.
2. Make sure your DN-508MXA is securely connected to a power outlet and is powered on.
3. If DN-508MXA is connected directly to a computer, go to <http://192.168.0.1> in your web browser. You may have to enter the operator password. There is no default password, but if you have already set one, you will have to enter it here.

If DN-508MXA is connected to a network switch or router (wirelessly or wired), use the **Menu** button and the **Volume/Sel** knob to do the following:

- i. Press **Menu** to enter the Menu.
 - ii. Select and enter **2. System**, then **Ethernet**, then **IP Address**, and then the **Auto** setting (you may have to enter the administrator password).
 - iii. Set **Auto** to **On**, and select **Yes** when asked if you want to apply the change.
 - iv. Press the **Mute/Back** button to return to the previous page, and then select **IP Address** again. The display will now show a 12-digit IP address. Enter this address into your web browser as <http://###.###.###.###>. You may have to enter the administrator password. The default administrator password is **adminpwd**.
4. **IMPORTANT:** Before updating the firmware, make sure to back up your system settings. Under the **Settings** tab of the DN-508MXA web interface, find **Setting File** and click the **Download** button to save your settings to your computer.

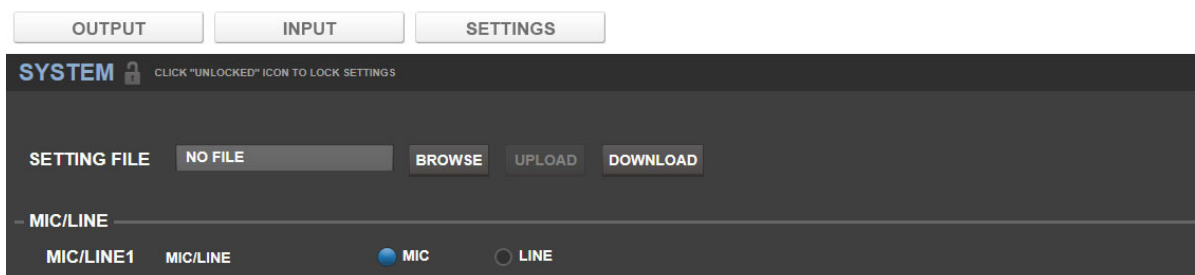


5. On the **Settings** page, find the **Firmware** section. Click the **Browse** button to locate the **.bin** firmware update file you downloaded.
6. Click the **Verify** button to verify the firmware update before proceeding.
7. Once verification is complete, click the **Execute** button to begin updating the firmware.

IMPORTANT: During the update process, **do not** power off DN-508MXA or disconnect it from the power outlet. Doing so can damage the unit.



8. Once the firmware update is complete, DN-508MXA will revert to default settings, including the default IP address for connecting to the web interface. Follow the steps above to reset the IP address according to your setup.
9. Return the **Setting File** section of the **Settings** tab of the web interface and click the **Upload** button to load your saved settings from your computer.

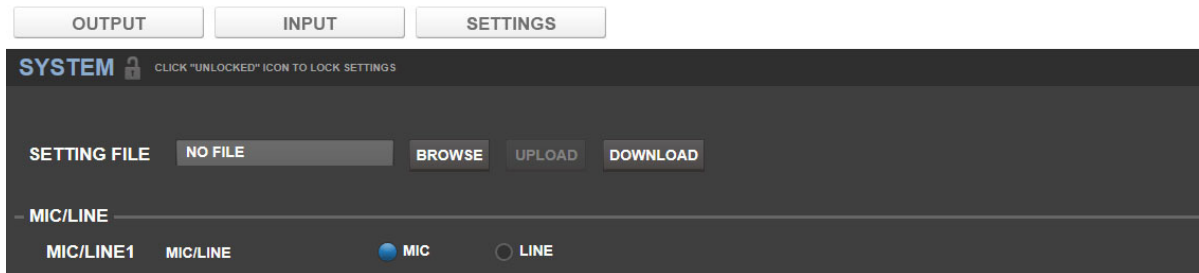

10. To verify the firmware has updated successfully, press the **Menu** button on DN-508MXA to open the menu, then turn the **Vol/Select** knob to select **Information**. Turn the **Vol/Select** knob to select **Firmware Version**, and press it to view the current firmware version.

Technical Support

For additional help, visit denonpro.com/support.