



## Audio Commander

Latest Firmware Version: 1.07

Release Date: May 17, 2018

## Firmware Update Instructions

### To update the firmware on your Audio Commander:

1. Copy the downloaded **.zip** file to the root directory of a USB storage device.
2. Make sure your Audio Commander is securely connected to a power outlet and is powered off, and then insert the USB storage device into the **USB Player** port on the rear panel of Audio Commander.

**Note:** Do not connect the USB storage device to the **USB Charge** port, as this will not apply the firmware update.

3. Power on Audio Commander. The unit will automatically begin updating the firmware.
4. Allow the update process to complete until the LCD shows **SUCC** to indicate the firmware was updated successfully.

**IMPORTANT:** During the update process, **do not** power off Audio Commander or disconnect it from the power outlet. Doing so can damage the unit.

5. Power Audio Commander off and remove your USB storage device. Your Audio Commander now has the newest firmware.
6. To verify the firmware has updated successfully, power on Audio Commander again and then press and hold the **Stop** button. The new firmware version will be shown on the LCD.

## Changes

### Firmware Version 1.07 (May 2018)

- When no audio signal is input for 1 hour, the unit will enter Energy Saving Mode.
- When in Energy Saving Mode, press any button to wake the unit.

## Technical Support

For additional help, visit [denonpro.com/support](http://denonpro.com/support).