

Firmware Update Instructions

To update the firmware on your DN-F350:

1. Download the latest **DN-F350.bin** firmware update file from denonpro.com.
2. Add firmware update file to the root folder of a FAT32-formatted USB flash drive.
3. With the DN-F350 powered off, set the **Operation Switch** on the unit's rear panel from Normal to **Update**.
4. Insert the USB flash drive into the rear panel **USB slot**.
5. Power on DN-F350. The display will show **UPDATE**.
6. Use the **Main Volume** dial to select **Y** and press it to begin the firmware update, or select **N** to cancel.

Important: Do not power off the unit while the firmware update is in progress.

7. Once the update is complete, the display will show **SUCCEED**.
8. Power off the unit, remove the USB flash drive and set the **Operation Switch** back to **Normal**.
9. To check the firmware version, press and hold the **Main Volume** dial to enter the Menu. Turn the dial to select **System Version** and press it to view the firmware version.

Release Notes

v1.13

- Various bug fixes. Allows user to adjust the brightness of the display via the front panel and remote control.

Technical Support

For additional help, visit denonpro.com/support.