



DN-300C MKII

Latest CD Firmware Version: 3.33

Firmware Update Instructions

To update the CD firmware on your DN-300C MKII:

1. Download the latest DN-300C MKII CD firmware update file from denonpro.com.
2. Add the firmware update file to the root folder of a FAT32-formatted USB flash drive.
3. With the DN-300C MKII powered off, insert the USB flash drive into the *front panel* **USB slot**.
4. Power on DN-300C MKII. The display will show **Flash Update**.
5. Use the **jog dial** to select **Y** and press it to begin the firmware update, or select **N** to cancel.

Important: Do not power off the unit while the firmware update is in progress.

6. Once the update is complete, power off the unit and remove the USB flash drive.

Technical Support

For additional help, visit denonpro.com/support.