

Firmware Update Instructions

Updating the firmware on your PMD-706 requires a computer with a valid internet connection to download the firmware update file and an SD card to transfer the firmware update to your PMD-706.

1. Visit marantzpro.com and find the product page for PMD-706 to download the firmware file.
2. Transfer the firmware update file (**PMD706update.bin**) to the root directory (not in any folder) of a FAT32 formatted SD card.
3. Insert the SD card with the firmware update file into the **SD Card Slot** on your PMD-706.
4. Power on PMD-706.
5. The display on your PMD-706 will show two rectangles while the firmware is being updated.
6. Once the firmware update has finished, the display on your PMD-706 will change to show the home screen.
7. Reboot your PMD-706 by turning it off and then back on to complete the firmware update process.

Changes

Firmware Version 1.23 (December 2018)

- Battery life improvements and various bug fixes.

Technical Support

For additional help, visit marantzpro.com/support.