

Numark

MIXSTREAM PRO
MIXSTREAM PRO+
MIXSTREAM PRO GO

User Guide

English
v5.0.0

Table of Contents

Introduction	4	Performing	15
Box Contents	4	Loading Tracks	15
Support	4	Searching & Filtering Tracks	16
Product Registration.....	4	Match.....	17
Configuration.....	5	Editing Playlists.....	18
Devices & File Analysis	5	Playlist Deck.....	19
Features	6	Playback & Cueing	20
Top Panel	6	Syncing & Pitch Adjustment.....	21
Front Panel.....	9	Beat Grid Editing.....	23
Rear Panel.....	9	Pad Modes.....	24
Operation.....	10	Cue Mode	24
Touchscreen Overview.....	10	Saved Loop Mode	24
Performance View.....	10	Auto Loop Mode.....	24
Track Overview & Waveform.....	10	Roll Mode	25
Performance Library	11	Sampler Mode	25
Toolbar	12	Stems Mode.....	26
Library View	13	Touch FX.....	27
		Control Center	28
		Parameters.....	28
		Layout	29
		Profile	30
		Settings	32
		Source.....	34
		Engine Remote Library.....	35
		Wi-Fi.....	35
		Bluetooth®	36
		Record	37
		Engine Lighting	38
		Preferences	39

Appendix..... 40

FX Parameters..... 40

 BPM FX..... 40

 Touch FX 41

Technical Specifications 42

Trademarks & Licenses..... 44

Introduction

Thank you for purchasing your Mixstream Pro hardware. At Numark, we know how serious music is to you. That's why we design our equipment with only one thing in mind—to make your performance the best it can be. We're honored and excited to play a part in your musical and creative DJ journey!

Note: This User Guide covers the features and functions Mixstream Pro, Mixstream Pro +, and Mixstream Pro Go. All product references to Mixstream Pro also apply to Mixstream Pro + and Mixstream Pro Go unless otherwise noted.

Box Contents

Mixstream Pro *or* Mixstream Pro + *or* Mixstream Pro Go

Power Supply

USB Cable

Engine DJ Software Download Card

Display Cleaning Cloth

Quickstart Guide

Safety & Warranty Manual

Important: Visit enginedj.com/downloads to download the Engine DJ software.

Support

For the latest information about this product (documentation, technical specifications, system requirements, compatibility information, etc.), visit numark.com.

For additional product support, visit numark.com/support.

Product Registration

Your product may include exclusive software and/or promotions which can only be accessed by registering your new product on the Numark website.

To check eligibility and access the available content, please register your product by following the instructions below.

1. Visit numark.com.
2. Click **My Account** and follow the instructions to access your existing account or to create a new account.
3. Once signed in, click **Register New Product**.
4. Enter the product serial number into the box and click **Check Serial**.
5. Complete the form and click **Register Your Product**.
6. Upon successful registration, any applicable software downloads, exclusive content, and promotional offers will be shown in your account.

Configuration

When your Mixstream Pro hardware is first powered on, you will be presented with a Wi-Fi connection menu to connect to your local network. You can dismiss this screen each time, or set it to not show again at startup. You can adjust your connection settings at any time using the [Wi-Fi](#) menu in the Control Center.

Next, you will be prompted to connect to your Engine DJ profile. With your Engine DJ profile, you can register your device, connect streaming and cloud services so you can log into each with a single Engine DJ profile login, and access crowd-sourced streaming metadata and beat grid information. You can use a mobile device to scan the QR code, or visit device.enginedj.com and enter the code shown. You can also dismiss this screen each time, or set it to not show again at startup. To log in to an Engine DJ profile at any other time, use the **Log In** button found in the [Profile](#) menu.

Mixstream Pro hardware has more settings that you can customize in the [Layout](#), [Profile](#), and [Settings](#) menus. See [Control Center](#) to learn about these settings.

Devices & File Analysis

Mixstream Pro can play music files from USB drives, SD cards, or connected streaming and cloud services. Make sure you are using only the supported file systems (for USB drives or SD cards) and file formats (for music files) listed below.

Supported file systems: exFAT (recommended), FAT32

Supported file formats: AAC/M4A	MP3 (32–320 kbps)
AIF/AIFF (44.1–192 kHz, 16–32-bit)	MP4
ALAC	Ogg Vorbis
FLAC	WAV (44.1–192 kHz, 16–32-bit)

Although Mixstream Pro can play tracks that have not been analyzed yet, pre-analyzing them allows its features to work most effectively. You can analyze tracks in one of two ways:

- **On your Mixstream Pro hardware, load the track:** When you load a track to play, your Mixstream Pro hardware will automatically analyze it (if it has not already been analyzed). This may take a moment to complete, depending on the length of the track. You can start playing the track from the beginning **immediately**, though you will need to wait a moment for the analysis to finish.
- **Use Engine DJ software:** The included Engine DJ software can pre-analyze your music library to use with your Mixstream Pro hardware. You can also use it to organize your library and manage your hardware preferences (see [Operation](#) to learn more about this).

Visit enginedj.com/downloads to download the Engine DJ software.

To eject a USB drive or SD card:

1. Press the **Control Center** button, swipe down from the toolbar, or tap the **gear icon** to open the [Control Center](#). Then, tap **Source** at the bottom of the screen. A list of connected devices will appear in the touchscreen.
2. Tap the **eject icon** for the device you would like to eject. If a track on the device is currently playing, you will be asked if you want to continue ejecting, which will stop the track. Tap **Cancel** to cancel ejecting the device, or tap **Eject Anyway** to eject it.


To eject additional devices, repeat this step.

To return to the previous screen, press **Source** again, or tap the **X** in the upper-right corner.

Features

Note: All product references to Mixstream Pro also apply to Mixstream Pro + and Mixstream Pro Go unless otherwise noted.

Top Panel

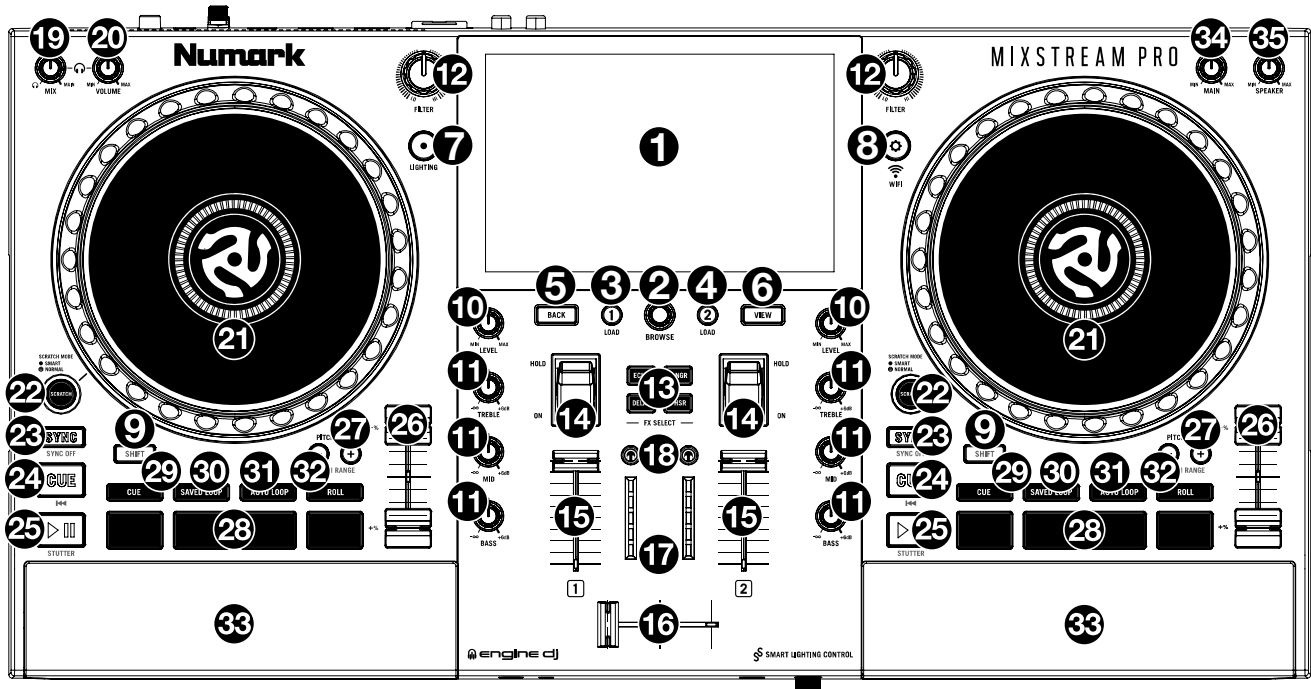

1. **Touchscreen:** This full-color, multi-touch display shows information relevant to Mixstream Pro's current operation. Touch the touchscreen (and use the hardware controls) to control the Mixstream Pro interface.
2. **Browse Knob:** In **Performance View**, turn this knob to open **Library View** and navigate through lists.

Note: Alternatively, you can change the default **Encoder Behavior** for this knob to adjust the waveform zoom level in the **Settings > Device** menu.

Press the knob to move forward in the touchscreen, select an item, or load a track to a selected deck. Press and hold **Shift** and press this knob to load the selected track to the Prepare list.
3. **Load 1:** Press this button to load the selected track to Deck 1.

Quickly double-press this button to instant double the track currently playing on Deck 2 to Deck 1. Press and hold **Shift** and press this button to remove the loaded track from Deck 1.
4. **Load 2:** Press this button to load the selected track to Deck 2.

Quickly double-press this button to instant double the track currently playing on Deck 1 to Deck 2. Press and hold **Shift** and press this button to remove the loaded track from Deck 2.
5. **Back:** Press this button to move back in the touchscreen.
6. **View:** Press this button to cycle between the **Library View** and **Performance View**. Press and hold this button to open the **Control Center** menu.

In Performance View, hold **Shift** and press the **View** button to cycle between **View 1–3** layout presets, which can be customized in the **Layout** menu. In Library View, hold **Shift** and press the **View** button to open or close the collection panel while the track list is in focus.
7. **Lighting:** Press this button to open the **Engine Lighting** menu.
8. **Control Center:** Press this button to open the **Control Center** menu, where you can quickly adjust commonly used settings and navigate to the Layout, Profile, Settings, Source, Wi-Fi, Bluetooth, Record, and Engine Lighting menus.
9. **Shift:** Press and hold this button to access secondary functions of other controls.
10. **Channel Level:** Turn this knob to adjust the level of the pre-fader, pre-EQ audio signal for the channel.
11. **Channel EQ:** Turn these knobs to boost or cut the high, mid-range, and low frequencies for the channel.
12. **Filter:** Turn this knob to apply a filter to the channel. Starting from the center (12:00) position, turn it counter-clockwise to apply a low-pass filter, or turn it clockwise to apply a high-pass filter.

13. **FX Select:** Press these buttons to enable or disable the selected effect: Echo, Delay, Flanger or Phaser.

14. **Effects Toggle:** Move this toggle switch away from you to activate the selected effect—the toggle will latch to that position. Pull the toggle back to the center position to deactivate the effects.

Pull and hold this toggle toward you to activate the selected effect momentarily, and release the toggle to deactivate the effect—the toggle will return to the center position.

15. **Channel Fader:** Use this fader to adjust the channel’s volume level.

16. **Crossfader:** Use the crossfader to mix between Deck 1 and Deck 2.

17. **Main Level Meters:** These LEDs display the audio signal level of the main mix (sent out of the **Main Outputs**).

18. **Headphone Preview:** Press this button to preview the channel in the headphones. Use the **Headphone Mix** knob to adjust the mix between the channel’s pre-fader signal and the headphones’ cue channel.

19. **Headphone Mix:** Turn this knob to adjust the blend of the headphone cue and main channels together in the headphones.

20. **Headphone Volume:** Adjusts the volume for headphone cueing.

21. **Platter:** This capacitive, touch-sensitive platter controls the audio playhead when the wheel is touched and moved.


22. **Scratch Mode:** When this button is enabled, Smart Scratch mode will be active. In this mode, the track’s timeline continues (half of the waveform in the display will continue moving forward) when you use the platter to "scratch" the track. When you release the platter, the track will resume normal playback from where it would have been if you had never moved the platter.

Press this button again to disable Smart Scratch and enable vinyl (“Normal”) mode for the platter. You can use the **platter** to “scratch” the track as you would with a vinyl record.

Note: Smart Scratch is enabled by default and can be adjusted in the [Settings > Device](#) menu.

Press and hold **Shift** and press this button to enable jog mode. In this mode, touch the platter and move it to temporarily adjust the track’s speed. To exit jog mode, press and hold **Shift** and press this button again. You will return to Smart Scratch mode or vinyl mode, depending on what was last used.

Press and hold the **Scratch Mode** button to enter or exit Grid Edit Mode. Use the controls on the touchscreen to edit the beatgrid. See [Beat Grid Editing](#) for more information.

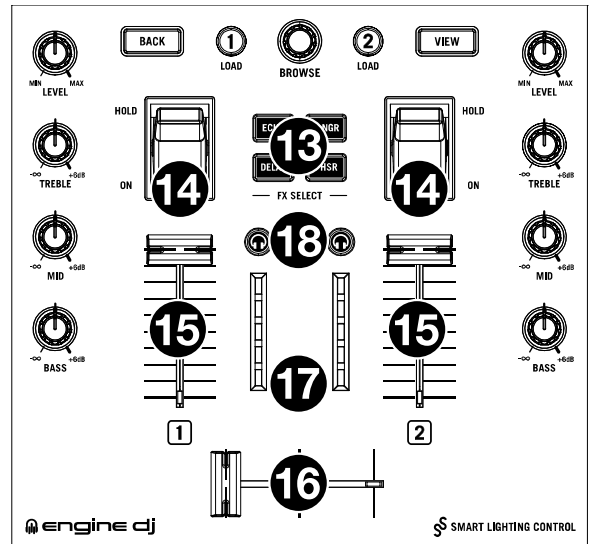

23. **Sync / Sync Off:** Press this button to activate or deactivate sync.

You can also set Sync to only deactivate when using **Shift** and this button by changing the **Sync Button Action** setting in the **Profile > Playback** menu.

24. **Cue:** During playback, you can press the **Cue Button** to return the track to the Temporary Cue Point and stop playback. If you did not set a Temporary Cue Point, then it will return to the beginning of the track. You can also press and hold **Shift** and press this button to return to the beginning of the track.

To move the Temporary Cue Point, pause the track and move the **platter** to place the audio playhead at the desired location, then press this button.

If the Deck is paused, you can press and hold the **Cue Button** to play the track from the Temporary Cue Point. Releasing the **Cue Button** will return the track to the Temporary Cue Point and pause it. To continue playback without returning to the Temporary Cue Point, press and hold the **Cue Button**, then press and hold the **Play Button**, and then release both buttons.

25. **Play/Pause:** This button pauses or resumes playback.

Press and hold **Shift** and then press this button to “stutter-play” the track from the initial cue point.

26. **Pitch Fader:** Move this fader to adjust the speed (pitch) of the track.

Press and hold **Shift** and then press one of the **Pitch Bend** buttons to adjust the total range.

27. **Pitch Bend -/+:** Press and hold one of these buttons to momentarily reduce or increase (respectively) the speed of the track.

Press and hold **Shift** and then press one of these buttons to set the range of the **pitch fader**.

28. **Performance Pads:** These pads have different functions on each deck depending on the current pad mode. See **Pad Modes** for more information.

29. **Cue:** Press this button to enter **Cue** mode. Press the button again to enter a second bank of cues. To assign a cue to a pad, press a pad at the desired location in the track. To clear a cue from a pad, press **Shift** and the desired pad.

Press and hold **Shift** and then press this button to enter Stems Mode.

Note: Stems support requires a one-time license purchase and activation. See **Stems Mode** for more information.

30. **Saved Loop:** Press this button to enter **Saved Loop** mode. Press the button again to enter a second bank of saved loops. To assign a loop to a pad and activate it, press a pad to create a Loop In point at the current location, and then press it again to create the Loop Out point at another location. To deactivate or reactivate a loop, press the corresponding pad. To delete a loop, press **Shift** and the desired pad.

31. **Auto Loop:** Press this button to enter **Auto Loop** mode. Press the button again to enter a second bank of auto loop lengths. To activate an auto loop, press a pad. To deactivate an auto loop, press the pad again.


32. **Roll:** Press this button to enter **Roll Mode**. Press the button again to enter a second bank of roll lengths. To trigger a roll, press a pad.

Press and hold **Shift** and then press this button to enter Sampler Mode.

33. **Speakers:** These speakers will play the same current audio as the Main Outputs. Use the **Speaker Level** knob to adjust the volume of the speakers.

34. **Main Level:** Turn this knob to adjust the volume level of the **Main Outputs**.

35. **Speaker Level:** Turn this knob to adjust the volume level of the **speakers**.

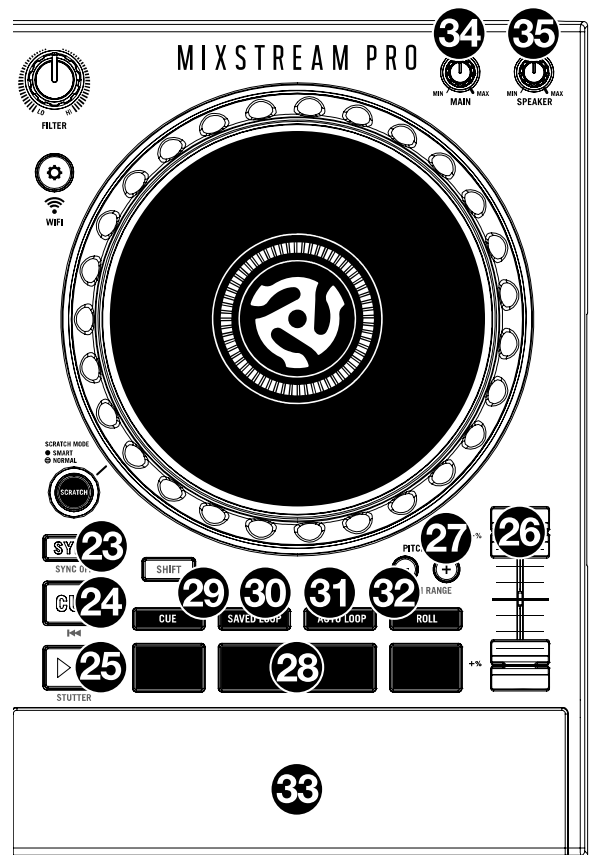


Front Panel



1. **Headphones (1/4", 1/8") (6.35 mm, 3.5 mm):** Connect your 1/4" or 1/8" (6.35 mm or 3.5 mm) headphones to this output for cueing and mix monitoring. The headphone volume is controlled using the **Cue Gain** knob.
2. **Mic Input (1/4" / 6.35 mm):** Use a standard 1/4" (6.35 mm) cable (not included) to connect a standard dynamic microphone to this input.
3. **Mic Level:** Turn this knob to adjust the volume level of the microphone input. You can adjust the microphone attenuation and routing in the [Settings > Mic](#) menu.

Rear Panel

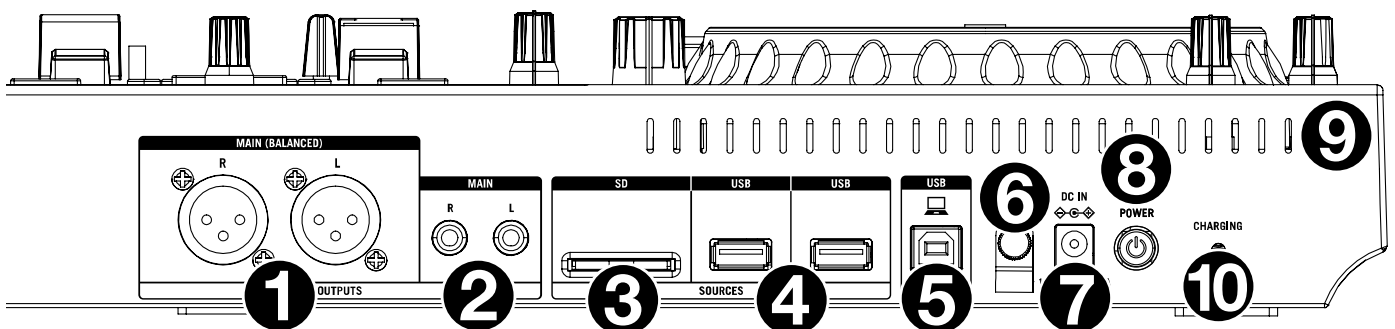

1. **Main Outputs (XLR, balanced):** Use standard XLR cables to connect these outputs to loudspeakers or an amplifier system. Use the **Main** knob on the top panel to control the volume level.
2. **Main Outputs (RCA, unbalanced):** Use standard RCA cables to connect these outputs to loudspeakers or an amplifier system. Use the **Main** knob on the top panel to control the volume level.
3. **SD Card Slot:** Insert a standard SD card to this slot. You can use the touchscreen to select and load tracks from your SD card.
4. **USB-A Ports:** Connect standard USB drives to these USB ports. When you select a USB drive as a source, you can use the touchscreen to select and load tracks from your USB drive. You can also connect a keyboard to these ports to easily search through your library.
5. **PC USB-B Port:** Use a standard USB cable (included) to connect this USB port to an available USB port on your computer.
6. **Power Adapter Restraint:** Secure the power adapter cable to this restraint to prevent it from accidentally unplugging.
7. **Power Input:** Use the included power adapter to power the unit.
8. **Power Button:** Press this button to power your Mixstream Pro hardware on. Power on your Mixstream Pro hardware only **after** you have connected all of your input devices and **before** you power on your amplifiers and loudspeakers.


To power off your Mixstream Pro hardware, press this button and follow the prompts on the touchscreen. Power off your amplifiers and loudspeakers **before** powering off your Mixstream Pro hardware.
9. **Vent:** Make sure this vent is unobstructed while using your Mixstream Pro hardware.
10. **Charging LED (Mixstream Pro Go Only):** This LED will be lit solid red when Mixstream Pro Go is plugged in and charging. Once the battery has been fully charged, the LED will turn off.

Operation

Touchscreen Overview

Performance View

Track Overview & Waveform

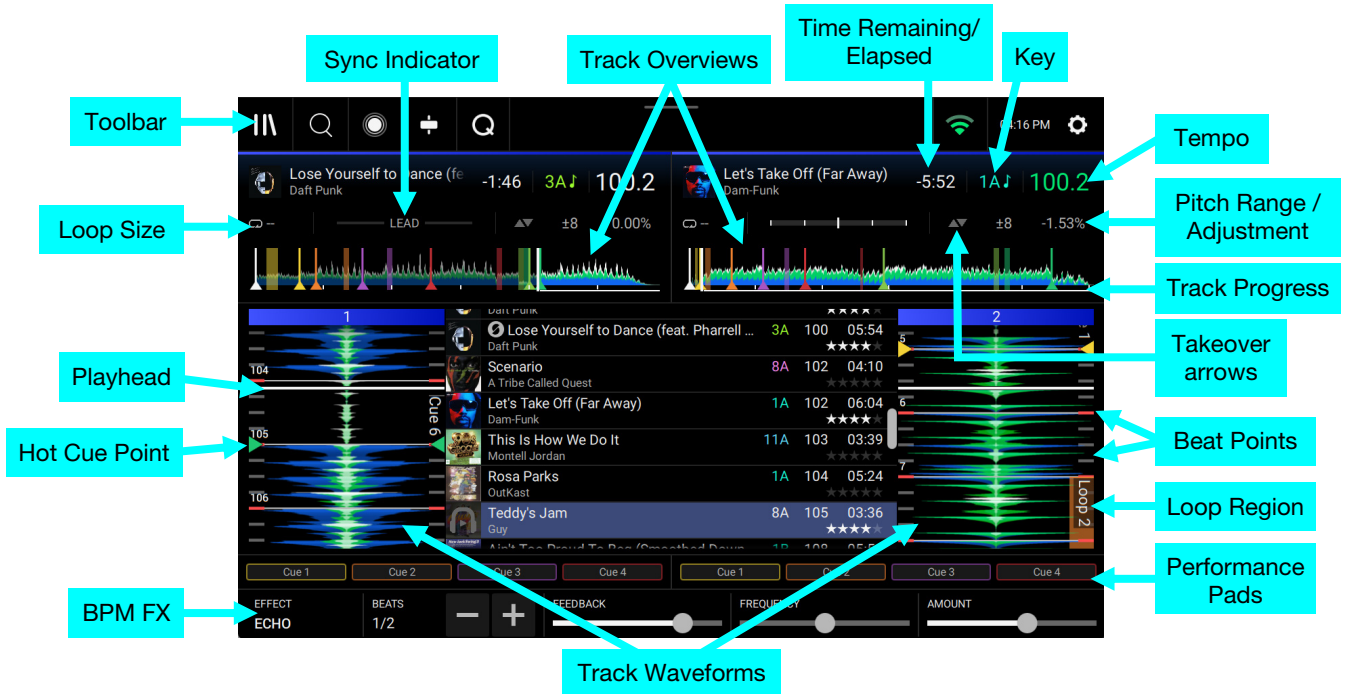

Layout 1: Vertical Waveforms with Performance Pads, Performance Library, and Main FX

Swipe left or right on the track overview to scan through the track while the track is paused.

Note: You can use this feature during playback if Needle Lock is off. If Needle Lock is on, stopping the platter with your hand or palm will allow you to swipe through the track overview. See [Profile > Safety](#) to learn about Needle Lock.

Spread or pinch your fingers on a waveform to zoom in or out of it, respectively.

Tap the time to switch between the elapsed time and remaining time.

Tap the key to access Key Lock and Key Sync controls. See [Syncing & Pitch Adjustment](#) for more details.

Tap the track artwork (if shown) to open the track information window. In this window, tap the star icons at the bottom of the screen to add or change a track's star rating.

Hold Shift and press View to cycle between View 1-3 layout presets. Performance View layouts can be customized using the [Layout](#) menu.



Layout 2: Horizontal Waveforms with Performance Pads, Performance Library, and Main FX



Layout 3: Horizontal Waveforms with Main FX

Performance Library



The Performance Library can be enabled or disabled in the **Layout** menu of the Control Center. The location of the Performance Library will depend on the waveform orientation. When the Performance Library is shown, you can do the following:

Swipe up or **down** to browse tracks.

Tap and drag the scroll bar to quickly browse through tracks.

Swipe left to load a track to the left deck. Alternatively, half-swipe left and then tap **Deck 1**.

Swipe right to load a track to the right deck. Alternatively, half-swipe right and then tap **Deck 2**.

Double-tap to load a track to a selected deck or sampler slot.

Tap the track art to preview the track. Tap again to stop previewing. While previewing, tap along the track entry to scan through the track. When **On**, track preview audio will be routed to the active deck when no tracks are loaded. When tracks are loaded, the preview audio will be routed to the inactive deck.

Tap and hold a track to view track information. In this window, tap the **star icons** at the bottom of the screen to add or change a track's star rating.

Toolbar

The **toolbar** at the top of the touchscreen features shortcuts to [Library](#) view and displays the status of certain hardware and feature settings. **Swipe down** from this area to open the [Control Center](#).



Browse: Tap the stacks icon to open the full [Library View](#) screen.

Search: Tap the magnifying glass icon to search for tracks using the keyboard that appears in the display.

Touch FX: Tap here to open the [Touch FX](#) screen.

Fader Echo: Tap here to enable or disable fader echo. When enabled, an echo will be applied when moving the crossfader to the opposite deck or moving the channel faders to zero, allowing you to perform echo out transitions. You can use the Fader Echo controls in the [Settings > FX](#) menu to adjust the behavior of the effect.

Q: Tap here to enable or disable quantization. When enabled, time-based features like triggering cues and loops will snap to the beat-grid according to the **Cue/Loop Quantization** setting in your [Profile > Cues/Loops](#).

Link: Shows the current Ableton Link status. Enabling Ableton Link will synchronize the beat, phase, and tempo of Ableton Live and your EngineOS hardware over a wireless or wired network.

Record: When recording is active, the current record status and time elapsed will be displayed here.

Continue: The figure-eight icon indicates Continue is enabled, which will keep playing the next track when the active track has ended.

Battery: Shows the current battery life (Mixstream Pro Go only).

Bluetooth: Shows the current Bluetooth connection status when Bluetooth is enabled. Tap here to open the [Bluetooth](#) connection menu.

Wi-Fi: Shows the current Wi-Fi connection status when Wi-Fi is enabled. Tap here to open the [Wi-Fi](#) connection menu.

Time: Displays the current local time. You can adjust the Time in the [Settings > Device](#) menu.


Control Center: Tap the **gear icon** to open the [Control Center](#).

Note: If your Mixstream device rises above normal operating temperatures, an overheat warning will be displayed in the toolbar. Make sure to leave sufficient space around your device for ventilation. If overheating persists, shut down the unit and allow it to cool down to prevent damage.

Library View

Use the full Library View to view your music library and load a track to the deck. You can also search through playlists, add tracks to the Prepare list, and search through your tracks using sorting and filtering features.


Important: Visit enginedj.com/downloads to download the Engine DJ software.

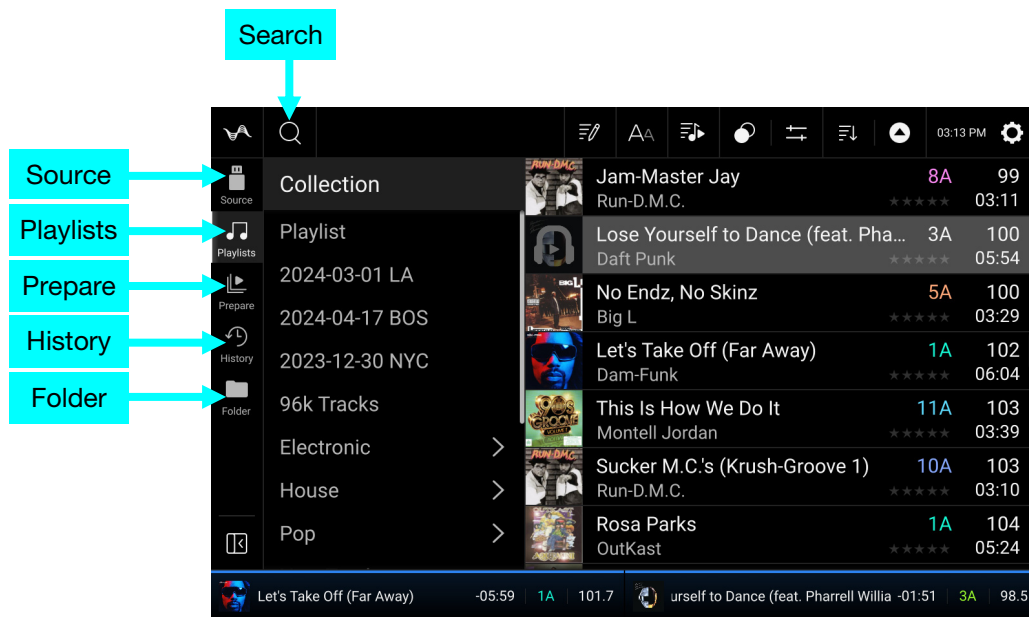


Tap the **magnifying glass** icon to search through your tracks by keyword. See [Searching & Filtering Tracks](#) for more information.

Use the five icons on the left side to navigate while in Library View:

- **Source:** Tap here to access the Quick Source Menu, where you can swap between connected sources to view and select tracks. Tap the **expand icon** to open the full **Source** menu, where you can connect to available streaming and cloud services, Engine Remote Libraries, and access pre-installed Demo and Sampler content. You can also enable or disable streaming and cloud services using the **Settings > Services** menu.
- **Playlists:** Your playlists are your collections of tracks, including lists of tracks arranged in a specific order. You may have playlists for different types of clubs or events, for specific genres, etc. You can create playlists to use here directly on your device (see [Editing Playlists](#)) or by using the included Engine DJ software.
- **Prepare:** You can load tracks to the Prepare list so that you can refer to them later when you want to play them during your performance (rather than searching through your entire library for the next track to play).
- **History:** Use this option to view your playback history.
- **Folder:** Use this option to browse the list of all files on a USB drive or SD card.

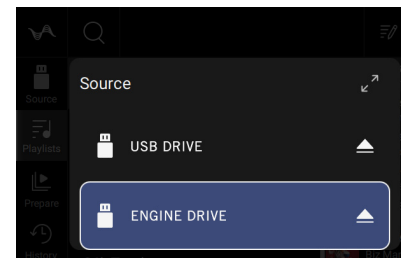

To close the collection panel while browsing a track list, tap the **close panel icon** at the bottom of the left side in Playlists or History view. Alternatively, press and hold **Shift** and press **View**.

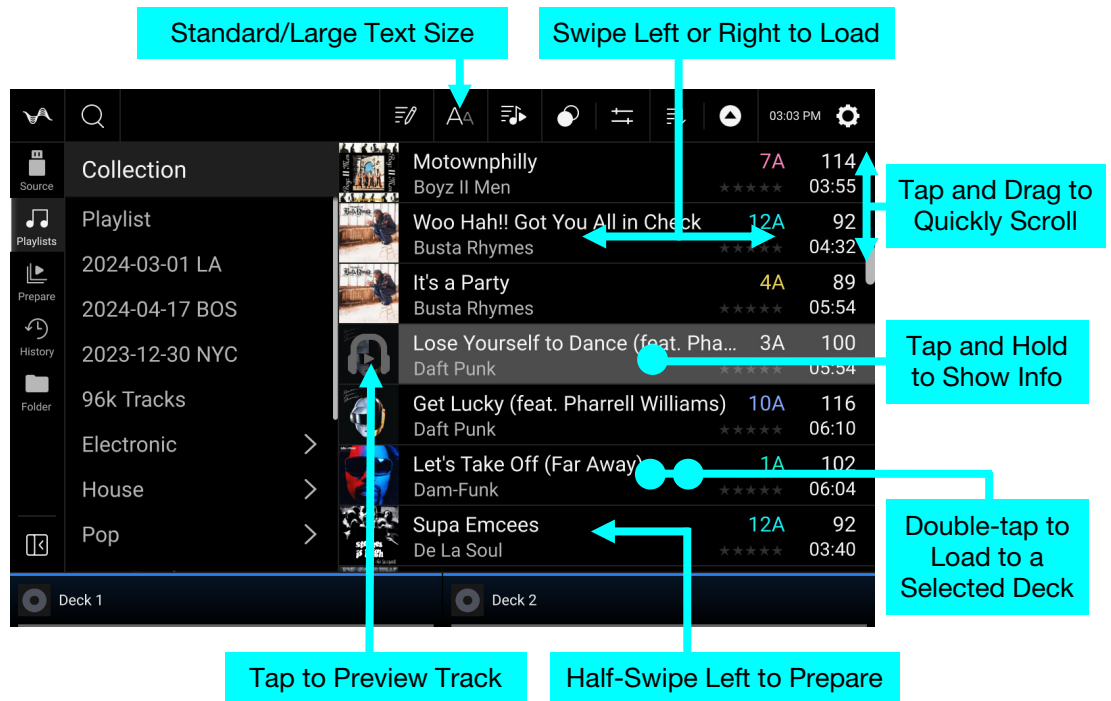

Tap the Standard/Large Track View icon (AA) at the top of the display to toggle between standard and large text sizes.

Swipe a list up or down to browse through it (e.g., your list of playlists or your list of tracks). Alternatively, press the **Back** or **Forward** buttons to select a list, and then turn the **Browse** knob.

Tap and drag the scroll bar to quickly browse through tracks.

Tap an icon or item in a list to select it (e.g., the icons for Playlists, Prepare List, or Files on the left side of the Library). Alternatively, press the **Browse** knob.


Swipe a track to the left or right to load it to a deck. Alternatively, highlight the track and then press the **Load** ◀/▶ buttons to load the track to the active deck on that side. You can also partially swipe the track to the left or right and then tap **Deck 1** or **Deck 2**, respectively, to load to that deck.

Partially swipe a track to the right and tap **Load** to load it to a deck or sampler slot. Then, tap the desired deck number or sample slot.

Alternatively, double-tap the track, or press the **Browse** knob, then tap the deck number or turn and press the **Browse** knob to select the desired deck.

Partially swipe a track to the left and tap **Prepare** to add it to the Prepare list. Alternatively, press and hold **Shift** and press the **Browse** knob. Swipe a track to the left in the Prepare list to remove it.

Tap and hold your finger on a track to show its information window (see image, right). In this window, tap the **star icons** at the bottom of the screen to add or change a track's star rating. Tap the X in the corner of the window to close it, or press the **Back** button. Turn the **Browse** knob to scroll through the current track list with the information window open.

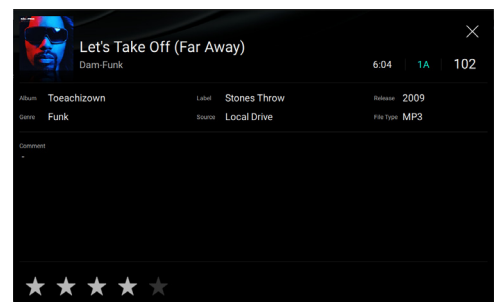

Tap the track art to preview the track. Tap again to stop the preview. While previewing, tap along the track entry to needle drop through the track.

Tap the Play As Playlist icon to send the currently selected track list to a selected deck. See [Playlist Deck](#) to learn more.

Performing

Loading Tracks

To load a track to a deck, do any of the following:

- In the Performance Library or Library View, highlight the track, and then press the **Load 1/2** buttons to load the track to that deck.
- In the Performance Library or Library View, swipe the track to the left or right to load the track to the deck on that side.
- In Performance Library or Library View, partially swipe the track to the left or right, and then tap **Deck 1** or **Deck 2**, respectively, to load to that deck.
- In Performance Library or Library View, highlight the track, then press the **Browse** knob to bring up the deck selection screen. Turn the **Browse** knob to select the desired deck, and then press the knob to load the track to that deck.
- In Performance Library or Library View, double-tap the track to bring up the deck selection screen. Tap to select the desired deck.
- In Library View, partially swipe the track to the right, and then tap **Load**. Next, tap the deck or sampler slot where you want the track loaded.

To add a track to the Prepare list, partially swipe the track to the left while in **Library View**, and then tap **Prepare**. Alternatively, press and hold **Shift** and press the **Browse** knob.

To show a track's information, tap and hold your finger on it. In this window, tap the **star icons** at the bottom of the screen to add or change a track's star rating.


To remove a track from a deck, press and hold **Shift** and then press the **Load 1/2** buttons.

While viewing the Prepare list:

Swipe right to load to a deck.

Swipe left to remove the track from the Prepare list.

Tap the clear button at the top of the display to remove all tracks from the Prepare list.

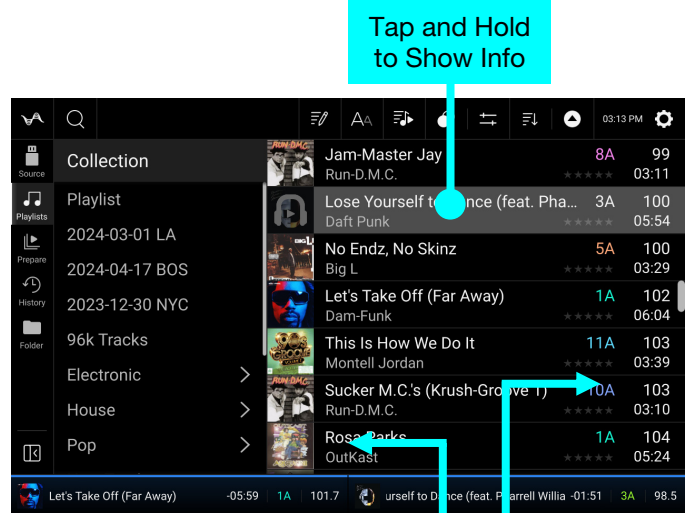

Searching & Filtering Tracks

To search tracks, tap the **magnifying glass icon** and use the keyboard that appears in the display.

The search results can be based on the following criteria: title, artist, album, length, key, comment, BPM, genre, label, year, date added or filename. By default, only **Title** and **Artist** are selected. Tap the **magnifying glass icon** again and then use the dropdown menu to select other categories, or to **Search All** categories.

Note: To reduce search time, only select fields in which you wish to search.

When searching from a playlist, you can choose to search only in that playlist (tap the playlist name) or your entire collection (tap **All**).

To hide the keyboard, tap the **keyboard icon** in the lower-right corner of the virtual keyboard, or tap anywhere on the screen other than the keyboard or the Search field.


To clear your search term, tap the **X** icon. Tap **Cancel** to stop searching.

To filter your tracks, tap **Genre**, **Artist**, **Album**, **BPM** or **Key**, and then tap one of the available options. Only tracks tagged with that genre, album, artist, BPM, or key will be shown. (By default, the key is notated using the Camelot system.) You can also use the **Search** field while tracks are filtered to refine your results.


Note: You can also use the Profile to set whether you want to show tracks with the same key only or tracks with compatible keys as well as the “tolerance” of BPM filter (to include tracks with tempos within 1–15 BPM of the selection). See [Profile > Library](#) to learn more.

To sort the list of results, tap the **Sort By** icon in the upper-right corner, and then tap one of the available options. Tap the **arrow icon** next to this to toggle between ascending and descending order.

Tap to Search

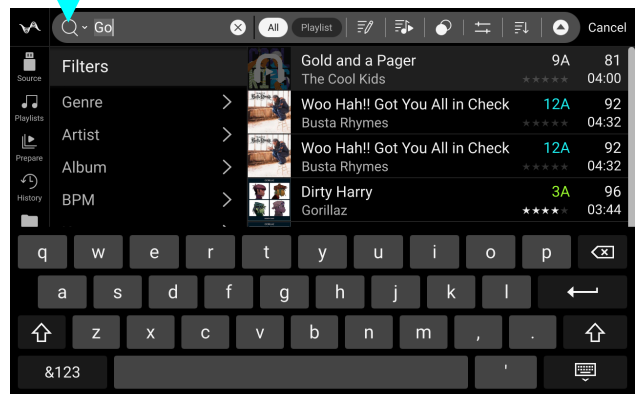


Tap to Select Search Criteria

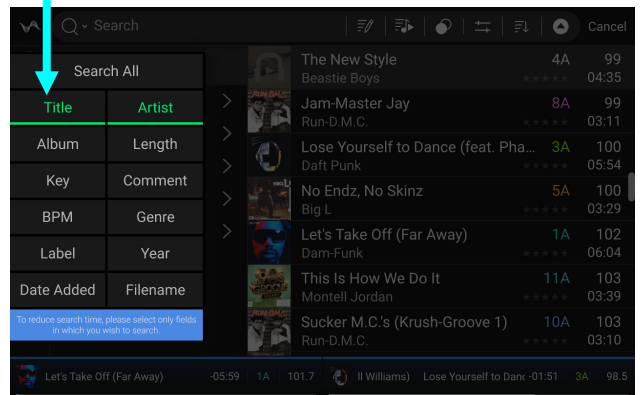


Tap to Toggle Ascending/Descending

Tap to Filter Tracks

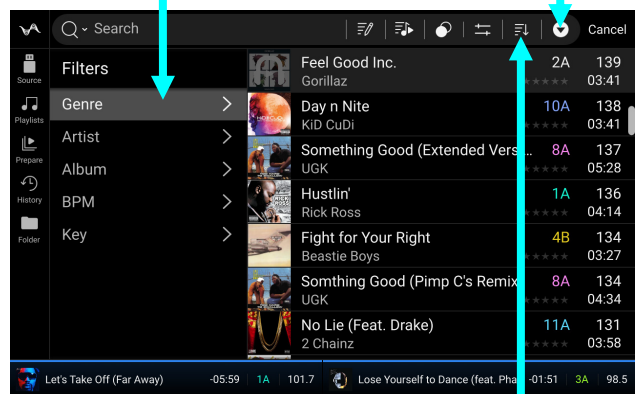

Tap to Choose Sort Preference

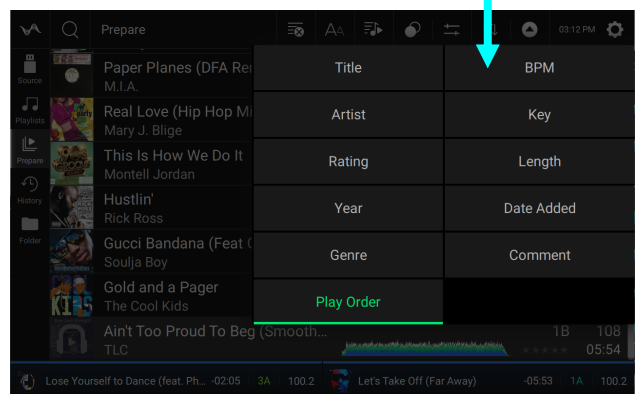

Match

In addition to the examples above, you can also use the **Match** tool to filter tracks that match the current lead track using a customizable set of parameters.

The Match function can be used in Playlist, Search, Prepare, and History views of the Browser. You can also access Match rules when viewing your Engine Remote Library.

Click the **sliders icon** to open the Match Rules screen, where you can select the following options for filtering tracks:

Follow Lead Deck: When enabled, tracks will be matched to the current Sync Lead deck. When disabled, use the following option to select the match deck.

Match to Deck: When Follow Lead Deck is disabled, use this option to select the deck for matching tracks.




BPM: Enable to match tracks by BPM. Use the - and + buttons to set the BPM range to match.

Key: Enable to match tracks by key. Select Fuzzy (includes relative keys of the dominant and subdominant keys of the lead track), Compatible (includes relative keys of the lead track), or Exact (includes only the same key of the lead track).

Genre: Enable to match track by genres. Select **Close** to include related genres (e.g., “Deep House” or “Acid House” will match to a track tagged with “House”), or **Exact** to match only the exact genre of the selected deck’s track.

Hide Played: When enabled, previously played tracks (highlighted in green text) will be hidden from the match results.

Note: Hide Played is unavailable when using Match in History view.

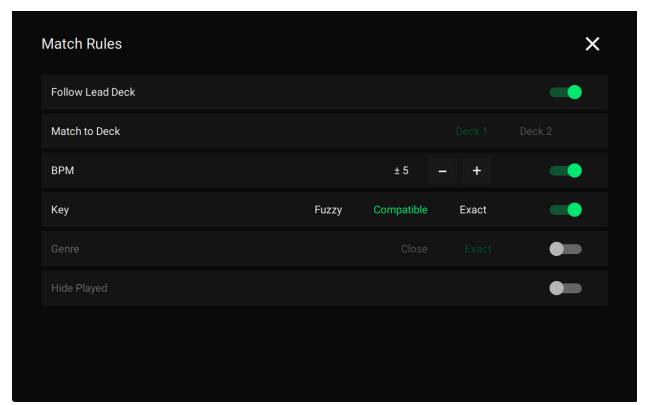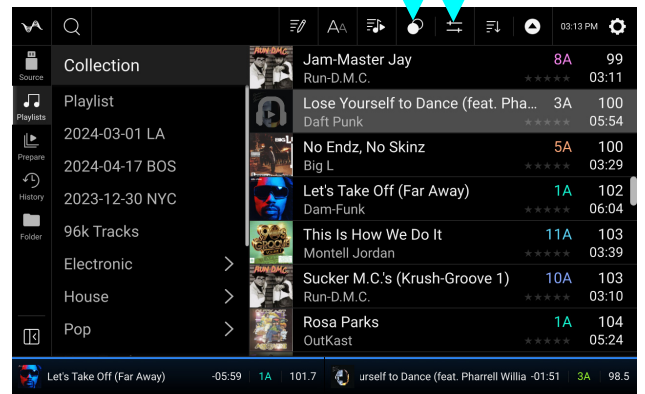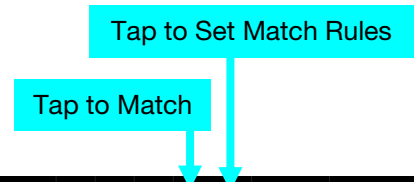

Once the Match Rules are set, tap the **match (circles) icon** to display the matching tracks in the list. If no tracks match the set rules, a message will appear in the track list noting that tracks may be hidden. Match results can be further sorted using the **Sort By** preferences and **Ascending/Descending** order.

Editing Playlists

Tap the **edit icon** at the top of the display while viewing the playlist screen. While editing is active, you can do any of the following:

To make a new playlist, tap **+ Create Playlist** in Playlist view.

To rename a playlist, swipe right on the playlist name. Use the keyboard that appears to type a new name, and then tap **Rename** to confirm. To exit without renaming, tap **Cancel**.


To add tracks to your playlist, tap a track to select it, and the open circle will become filled. After selecting tracks, tap and hold to move the tracks. You can drag the tracks over a playlist or folder and release your finger to instantly add them.

To remove a track from your playlist, swipe left on the track name, and then tap **Remove From Playlist**.

To reorder tracks in a playlist, first make sure the **Sort Preference** is set to **Play Order**. Then, tap and hold on the track name (while editing mode is still active) and move your finger up or down to change the track order. You can also reorder playlists in the same way.

To remove a playlist, swipe left on the playlist name. A pop-up will appear for confirmation. Tap **Yes** to remove the playlist, or **No** to return to editing. Tracks in a removed playlist will remain in your collection.


Tap to Enable Editing

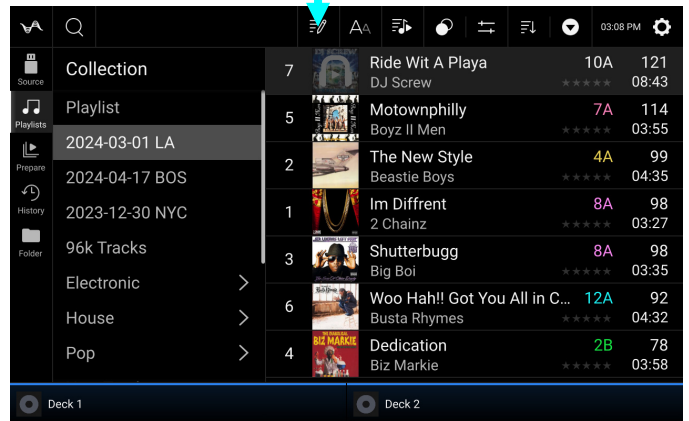

Swipe Left to Remove

Swipe Right to Rename


Tap to Select Tracks

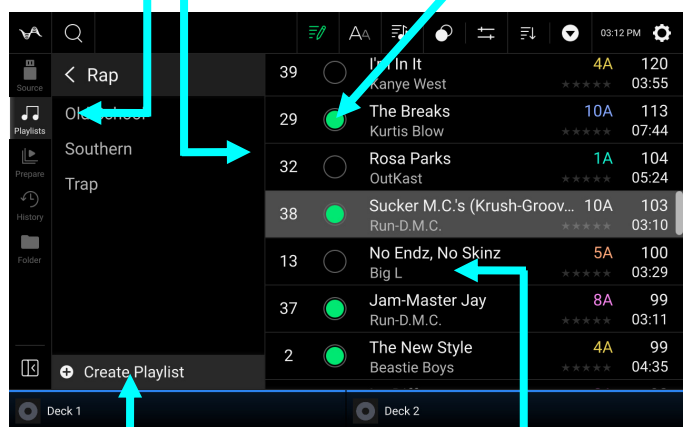

Tap to Create New Playlist


Swipe Left to Remove

Tap, Hold & Drag to Move Tracks

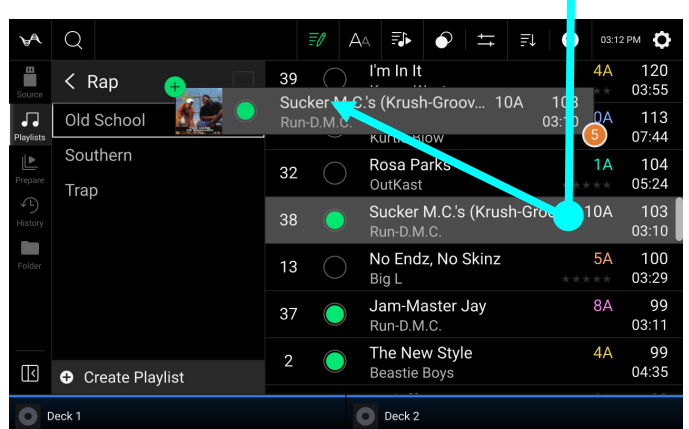


Playlist Deck

While in Library View, you can send the currently viewed file list to its own deck to play as a playlist.

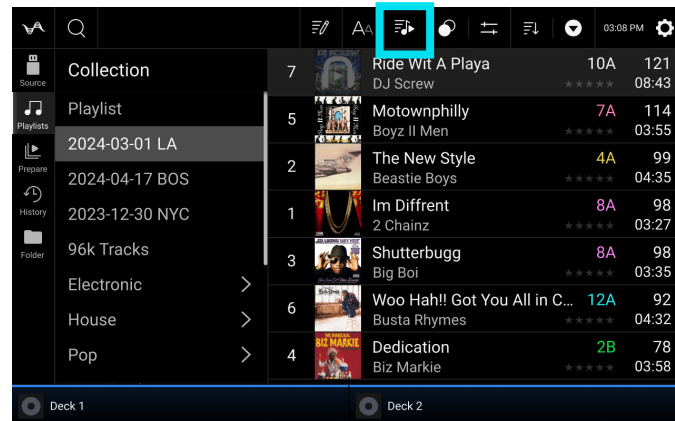

To enable **Playlist Deck**, tap the **Play As Playlist** icon in Library view. When enabled, the playlist on deck will play through the selected track list and automatically crossfade between each track according to the **Playlist Deck Crossfade Time** parameter in the **Settings > Mixer** menu.

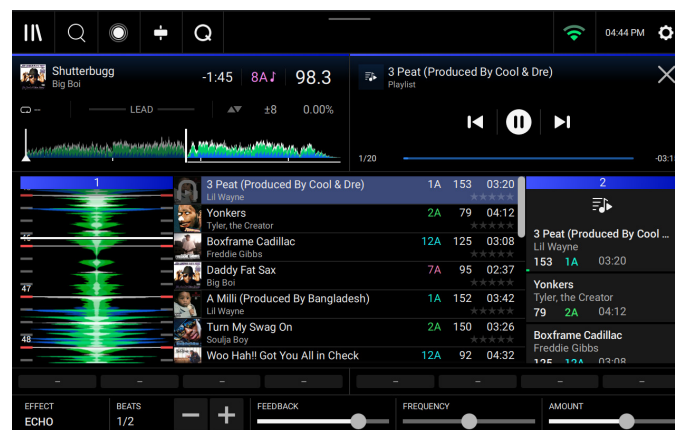

Note: The playlist deck controls only appear when using vertical waveform orientation.

To enable playlist deck playback, press **Play** on the selected deck.

To change tracks within the playlist, use the **track backward** and **track forward** buttons in the track overview area.

To remove the playlist from the deck, tap the **X** in the track overview area.

Playback & Cueing

To play or pause a track, press **Play/Pause** (▶/||).

To scratch a track, move the **platter** when the **Scratch** button is set to **On** and audio is playing. Smart Scratch Mode is enabled by default, which the track's timeline continues (half of the waveform in the display will continue moving forward) when you use the platter to scratch the track. When you release the platter, the track will resume normal playback from where it would have been if you had never moved the platter.

Press this button again to disable Smart Scratch and enable vinyl ("Normal") mode for the platter. You can use the **platter** to "scratch" the track as you would with a vinyl record.

Press and hold **Shift** and press this button to enable jog mode. In this mode, touch the platter and move it to temporarily adjust the track's speed. Press and hold **Shift** and press this button again to exit jog mode and return to Smart Scratch or vinyl mode.

To set the initial cue point, press **Cue** at the desired location while the track is paused.

To return to the initial cue point and stop, press **Cue** while the track is playing. The button will flash while the unit is paused at the initial cue point.

To return to the initial cue point and "stutter" playback, press and hold **Shift** and press **Play/ Pause** (▶/||).

To return to the beginning of a track, press and hold **Shift** and press **Cue** in the middle of a paused track.

To jump to a specific location in the track:

- If Needle Lock is **disabled**: tap the desired location in the track overview.
- If Needle Lock is **enabled**: pause playback and then tap the desired location in the track overview. Alternatively, make sure the **platter** is in **Normal** scratch mode, touch the top of the platter and tap the desired location in the track overview.

See [Profile > Safety](#) to learn about Needle Lock.

To zoom in and out of the waveform, place two fingers on the touchscreen and spread them apart or pinch them together.

Syncing & Pitch Adjustment

To enable sync, press **Sync**. The track tempo will turn green when sync is enabled. Tracks that are not synced will have their tempo displayed in white.

Note: Colors will appear differently when **Day Mode** is enabled in the **Control Center**.

To set which deck is the “sync lead,” or the deck that controls the sync BPM, tap the deck tempo. The **sync indicator** (beat phase meter or beat keeper, described below) for the deck will show “**LEAD**” when set as the sync lead.


After Sync is activated and the sync lead is set, press **Sync** on any additional decks. The tempo of each deck will immediately synchronize to match the tempo of the sync lead deck.

The Sync behavior is determined by the **Sync Mode** setting in the **Profile > Playback** menu.

To deactivate sync on a deck, press **Sync** again, or press and hold **Shift** and press **Sync**, depending on the setting of **Sync Button Action** in the **Profile > Playback** menu.

Sync Indicator option in the **Profile > Display** menu determines whether the **Beat Phase** meter or **Beat Keeper** is displayed in Performance View for visually syncing tracks.


When set to **Beat Phase**, the **phase meters** on each deck can be used to visually match the beat grid phase of your tracks in relation to the current Sync Lead deck.

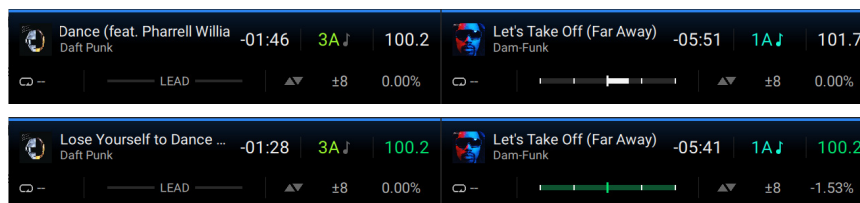

When the beat grid phase of the current deck is behind or ahead of the Sync Lead deck, the meter will be positioned to the left or right of the center, respectively. The phase meter visualizes a 1/2 beat in both directions. When the beat grid phase of the current deck matches the Sync Lead deck, the meter will be centered and fully lit green. To manually match the tracks using the phase meter, nudge the current deck until both meters are centered.

When a track is paused or unanalyzed, the phase meter will show a grey line.

 When set to **Beat Keeper**, the sync indicator shows the current beat value of the Sync Lead track in the top row, and the track on the current deck in the bottom row.



To adjust the track’s pitch, move the **pitch fader**. The pitch value in the deck info will change as the pitch is adjusted.

When active deck’s **pitch fader** is moved during playback, the **takeover arrows** on the inactive deck will light to indicate which direction to move the pitch fader in order to match the active layer’s pitch.

To adjust the track’s pitch momentarily, press and hold one of the **Pitch Bend** **-/+** buttons.

To adjust the range of the pitch fader, press and hold **Shift** and press one of the **Pitch Bend** **-/+** buttons to select **±4%**, **8%**, **10%**, **20%**, **50%**, or **100%**. The pitch range display in the deck info will change as the range is adjusted.

To change the key, tap the key in Performance View to open the Key Change Menu. In the Key Change Menu, you can access the following controls:

Tap the **musical note** to lock or unlock the track's key. When Key Lock is activated, the track's key will remain the same even if you adjust its speed.

Tap the **Sync** button to enable Key Sync. The track's key will sync with the key of the track on the other active deck. The key value will depend on the **Key Sync Mode** setting in the [Profile > Playback](#) menu.

Note: In order to activate Key Sync, playback must be enabled on both decks.

Tap the **key values** to decrease or increase the key. The key in the center will update to show the new key and the amount of change from the original key.

Tap the **reset** button to reset the key.

Tap the **X** button to close the Key Change Menu.




Beat Grid Editing

You can edit a track's beat grid directly from your Mixstream Pro hardware, the same way you can when using the Engine DJ software.

To enable beat grid editing, open the **Control Center** and tap the **Beat Grid Edit** icon. You can also open this menu directly by pressing and holding the **Scratch Mode** button.

Note: Beat grid editing is not accessible if there are no tracks added to the decks, if the deck is in use with Bluetooth, or if the deck is in use as a Playlist Deck.

Important: When the **Cue/Loop Quantization** feature is **on**, hot cue points and loop points will be automatically aligned according to the degree of quantization. See [Profile > Cues/Loops](#) to learn about this.

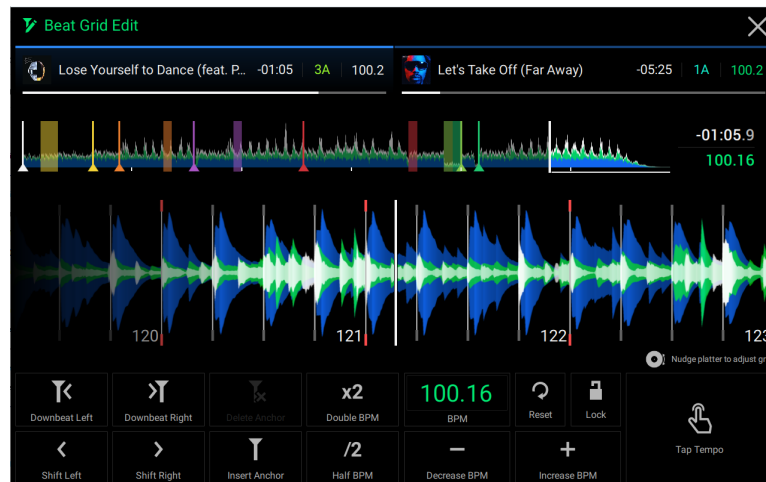

To adjust the position of the beats:

- Tap the **Downbeat Left/Right** buttons to move the beats based on the current analyzed grid.
- Tap the **Shift Left/Right** buttons or nudge the hardware platter to "slip" the entire grid left or right.
- Tap the **Insert Anchor** button to move the closest beat to the position of the playhead. All other beats will also shift accordingly. This allows you to create flexible beat grids for tracks with fluctuating tempo.
- Tap the **Delete Anchor** button to delete the closest anchor within a few beats.

To adjust the tempo:

- Tap the **BPM** field to input a new tempo. Use the number pad that appears to input the new value, and then tap the **Enter** button to accept it. Tap the **X** icon to cancel changes and return to the grid edit controls.
- Tap in the **Tap Tempo** icon area to manually set a tempo based on repeated taps.
- Tap the **Decrease/Increase BPM** buttons to decrease and increase BPM in small increments.
- Tap the **2X** and **/2** buttons to double or halve the current BPM.

To reset the beats to the original analyzed tempo and grid, tap the **Reset** button.

To lock the beat grid, tap the **lock** icon. When locked, further editing is prevented and all other Grid Edit controls will be greyed out.

To select another track for editing, tap the **Track Information** area.

To exit beat grid editing, tap the **X** in the top-right corner of the touchscreen, or select another mode.

Pad Modes

The 4 performance pads on each deck have different functions in each pad mode.

To enter each pad mode, press the corresponding button: **Cue**, **Saved Loop**, **Auto Loop**, or **Roll**.

To enter Sampler Mode, press and hold **Shift** and press **Roll**.

To enter Stems pad mode, press and hold **Shift** and press the **Cue**.

Cue Mode

In “hot” Cue Mode, you can use each pad to jump to an assigned hot cue point. The location of set hot cue points and timing of triggered hot cue points will depend on the current **Quantize** setting, if enabled.

Tip: You can use the Engine DJ software to set, name, and assign colors to your hot cue points. The names and colors will appear on the touchscreen for reference.

To assign a hot cue to a pad, press a pad at the desired location in the track.

To jump to a hot cue point, press the corresponding pad.

To enter a second bank of hot cues, press the **Cue** button a second time.

To clear a hot cue from a pad, press **Shift** and the desired pad.

Saved Loop Mode

In Saved Loop Mode, you can use each pad to activate an assigned loop.

Tip: You can use the Engine DJ software to set and name your loops. The names will appear on the touchscreen for reference. You can also set active loops in the Engine DJ software, which will begin looping automatically as soon as they are reached, and are shown with a striped pattern in the track waveform.

To assign a loop to a pad and activate it, press a pad to create a Loop In point at the current location, and then press it again to create the Loop Out point at another location. The loop will activate immediately.

To deactivate or reactivate a loop, press the corresponding pad. Once a loop has been created, the loop will deactivate or retrigger depending on the **Saved Loop Behavior** setting in the [Profile > Cues/Loops](#).

To enter a second bank of saved loops, press the **Saved Loop** button a second time.

To delete a loop, press **Shift** and the desired pad.

Auto Loop Mode

In Auto Loop Mode, you can use each pad to create and activate an auto loop. The current auto loop size is shown in the deck area of [Performance View](#).

To activate an auto loop, press a pad. The touchscreen will show the length of the auto loop for each pad.

To enter a second bank of auto loops, press the **Auto Loop** button a second time.

To deactivate an auto loop, press the pad again.

Roll Mode

In Roll Mode, you can press and hold each pad to trigger a “loop roll” of a certain length while the track’s timeline continues (half of the waveform on the touchscreen will continue moving forward). When you release the pad, the track will resume normal playback from where it would have been if you had never done anything (i.e., as if the track had been playing forward the whole time).

To trigger a roll, press the corresponding pad.

To enter a second bank of roll lengths, press the **Roll** button a second time.

Sampler Mode

In addition to the Pad Modes above, Mixstream Pro hardware also includes a Sampler Mode. This can be accessed from your hardware by pressing and holding **Shift** and pressing the **Roll** button.

In Sampler Mode, you can assign and trigger up to eight samples using your performance pads. Press and hold **Shift** and press **Roll** again to access the second bank of sampler slots.

You can view your assigned samples in Performance View by enabling the Performance Pads option in the [Layout](#) menu. When the Sampler pad mode is selected, you will see the sample names loaded to each pad in the slots below the track overview waveform.

Your hardware includes a set of pre-installed sample content, which you can browse from **Library View** when **Sampler Content** is selected as a source.

To load a sample from Library View, partially swipe the sample to the right and tap **Load**, double-tap the sample, or press the **Browse** knob. Next, instead of selecting a deck, tap one of the eight sampler slots on the touchscreen. Alternatively, press the hardware pad where you want the sample assigned. If a sample is already loaded to the selected pad, the new sample will replace the existing sample.

Loaded samples will be retained in memory across device reboots if the same source drive is connected and selected.

To trigger a sample, press the performance pad on the hardware.

The sampler volume can be adjusted using the **Sampler Volume** slider in the [Control Center](#).

Sampler audio routing can be adjusted using the **Sampler Output** option in the [Settings > Mixer](#) menu.

To stop a playing sample, hold **Shift** and press the performance pad.

To remove a sample, you must first exit Performance View. Samples cannot be removed while in Performance View to prevent accidental ejection. While in Library View, Settings, or another page, press and hold **Shift** and then press the performance pad with the sample you want to remove. If the sample is playing, you will need to stop it first, and then remove it.

Stems Mode

Mixstream Pro units also support Stems pad mode. To access Stems, you must first activate it by purchasing a one-time license to add to your Engine DJ profile.

1. Visit enginedj.com/stems to purchase a one-time license to add to your Engine DJ profile.
2. Once you have purchased the Stems license, power on your Mixstream Pro hardware and make sure you are connected to Wi-Fi and signed into your Engine DJ profile.
3. A pop-up will appear notifying you that new features are available, and you will need to reboot your unit to activate them. Tap **Reboot** to restart your unit, or tap **Ignore** to temporarily dismiss this message.
4. Once your unit has restarted, stems functionality will be available on your unit.

Track stems must be created using the Engine DJ software and packed to an external drive for use with Mixstream Pro hardware.

Tracks with stems will show a **Stems icon** before the track name. All stemmed tracks can be found in the **Stems** list of Library view when it is enabled in the [Profile > Library](#) menu (on by default when Stems is activated).

Adding a stem track to a deck will allow you to use Stems pad mode. This can be accessed from the hardware by pressing and holding **Shift** and pressing the **Cue** button.

When Stems Pad Mode is enabled, the top four pads can be used to isolate stems. From left to right, these pads control **Vocal**, **Melody**, **Bass**, and **Drums**.


To mute a stem, press the pad so it is dimly lit.

To unmute a stem, press the pad again so it is brightly lit.

Touch FX

The Touch FX feature allows you to control four powerful audio effects via the touchscreen to create buildups, drops, and transitions with a single touch.

To access Touch FX, tap the **Touch FX** icon in the toolbar at the top of the screen.

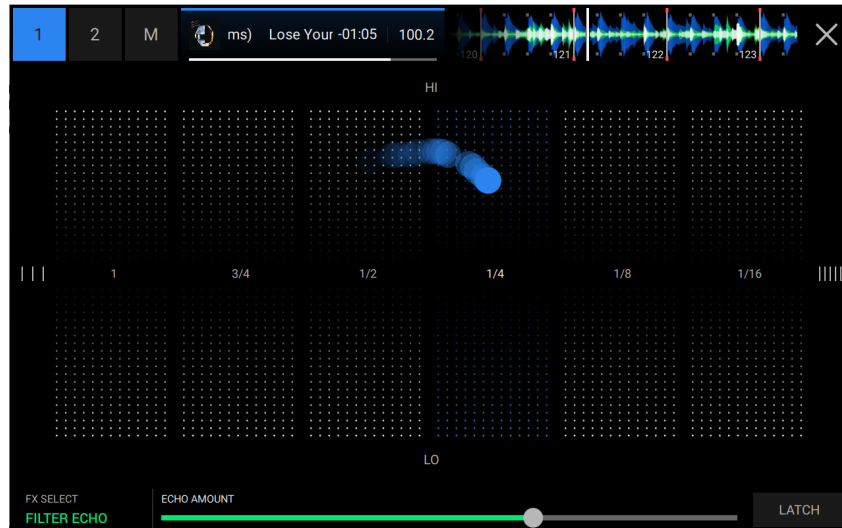

Touch FX can be applied to a single deck at a time, or to the main output (affecting both decks). Tap the deck number (**1** or **2**) in the upper-left corner of the screen to select the desired deck, and the track name, time, BPM, and waveform overview will be shown. Alternatively, tap **M** to select the main output.

Each effect has a pair of parameters, one mapped up and down and one mapped left and right, that can be continuously adjusted by tapping and dragging your finger around the center area. See [Appendix > FX Parameters > Touch FX](#) for more information on the available Touch FX parameters.

To change the current effect, use the **FX Select** menu in the bottom-left corner of the screen to select from the following options:

- Filter Echo
- Filter Reverb
- Filter Roll
- LFO Echo

To adjust an additional effect parameter, such as a **Feedback** or **Resonance** control, use the slider at the bottom of the screen.

To hold the current position of the Touch FX, tap the **Latch** button at the bottom-right of the screen. The effect will remain on in any position you move it to until Latch is turned off. Latch will automatically turn off if you switch active decks or change FX selection while it is enabled.

To close Touch FX and return to the previous screen, tap the **X** icon in the upper-right corner of the screen. Alternatively, press **View** or **Back** to switch to another screen. If you navigate away from the Touch FX screen with **Latch** engaged, the Touch FX icon in the Toolbar will pulse to indicate it is still active.

Control Center

Press the **Control Center** button, **swipe down from the toolbar**, or **tap the gear icon** to open the Control Center. Here, you can quickly adjust commonly used **Parameters** using the widgets in the center of the screen. You can also access the following pages. Click the links below to jump to that part of the guide:

- **Layout** – This menu is used to adjust the appearance of Performance View.
- **Profile** – This menu is used to edit your performance and library preferences.
- **Settings** – This menu is used to edit the settings of your Mixstream Pro hardware.
- **Source** – This menu is used for selecting your source media device.
- **Wi-Fi** – This menu is used for connecting to and configuring your Wi-Fi network.
- **Bluetooth**® – This screen is used for linking to and configuring Bluetooth devices.
- **Record** – This menu is used for recording and saving your performances.
- **Engine Lighting** – This menu is used for working with the SoundSwitch Engine Lighting integration.

Tap the **X** in the upper-right corner of the screen to exit the Control Center. Alternatively, press **Back**, or swipe up from the bottom of the screen.

Parameters

Quantize: Tap this to enable or disable quantization. When enabled, time-based features like triggering cues and loops will snap to the beat-grid according to the **Cue/Loop Quantization** setting in the **Profile > Cues/Loops** menu.

Continue: Tap this to enable or disable continuous playback, which will keep playing the next track when the active track has ended.

Stop Time: Use this slider to adjust the stop time, or how long the track takes to stop playing after the pause button is pressed.

Beat Grid Edit: Tap this to access beat grid editing from the touchscreen. See **Beat Grid Editing** for more information.

Split Cue: Tap to enable or disable split cueing. When enabled, the headphone cue preview signal is summed to mono and sent to the left headphone channel and the main mix is summed to mono and sent to the right channel. When disabled, the cue channel and main mix will be “blended” together.

X Fader: Tap this to enable or disable the crossfader.

X Fader Contour: Use this slider to adjust the slope of the crossfader curve. Slide towards the left for a smooth fade (mixing) or slide to the right for a sharp cut (scratching). The center position is a typical setting for club performances.


Sampler Volume: Use this slider to adjust the sampler volume level. See **Sampler Mode** for more information.

Bluetooth Device Volume: Use this slider to adjust the Bluetooth device audio input level.

Fader Echo: Tap this to enable fader echo. When enabled, an echo will be applied when moving the crossfader to the opposite deck or moving the channel faders to zero, allowing you to perform echo out transitions. You can use the Fader Echo controls in the **Settings > FX** menu to adjust the behavior of the effect.

Computer Mode: Tap this to switch your Mixstream Pro hardware to computer mode. In computer mode, you can use your Mixstream Pro hardware to send and receive MIDI messages to and from your computer.

Day Mode: Tap this to enable or disable Day Mode. This mode inverts the colors of the Mixstream Pro interface for better visibility in bright daylight environments.

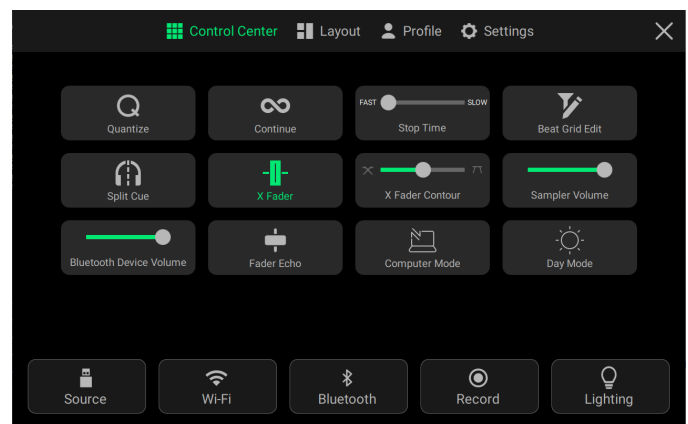

Layout

Use the **View 1–3** buttons to select a saved layout preset, and then use the options below to configure it. You can cycle between these options by pressing and holding **Shift** and pressing the **View** button on your Mixstream Pro hardware.

Press the **Reset Current View** button to reset the selected layout preset to its default configuration.

Performance Layout

- **Waveform Orientation:** Use this option to select whether the track waveforms are in **Horizontal** or **Vertical** display in Performance View.
- **Performance Pads:** Tap this to enable or disable the performance pads from appearing in Performance View. When enabled, the pads will be shown under the track overview on the touchscreen.
- **Performance Library:** Tap this to enable or disable the Performance Library from appearing in Performance View. The location of the Performance Library will depend on the waveform orientation.
- **Main FX:** Tap this to enable or disable **BPM Effects** from appearing in Performance View. When enabled, the FX selection and parameters will be shown at the bottom of the touchscreen. Use the **FX Select** buttons to enable an effect and display its parameters.

Profile

Press the **Log In** button to log in to your Engine DJ profile. Once you are logged in, you can access crowd-sourced streaming metadata and beat grid information, and automatically connect to associated streaming and cloud services. Existing streaming and cloud service logins will be removed, and any tracks loaded to a deck will be ejected. To manage your connected services, visit enginedj.com and log in to your account.

Tap the **Save To My Drive** button to save your settings to a connected drive. Profiles can be loaded when a media device with an Engine DJ profile is connected to your Mixstream Pro hardware.

Playback

- **Track Start Position:** This setting determines where the beginning of a track is after it loads. Select the actual start of the file (**Track Start**) or the automatically detected beginning of an audio signal (**Cue Position**).
- **Maintain Play State on Load:** When enabled, loading a new track will automatically enter the play state of the previous track on the deck where it was loaded. For example, if a track was already playing, the new track will begin playing as soon as it loads. When disabled, tracks will always load with playback paused.
- **Default Speed Range:** This setting determines the range of the **pitch fader**. Select **±4%**, **8%**, **10%**, **20%** or **50%**.
- **Nudge Sensitivity:** This determines the level of sensitivity when moving the platters: **Min**, **Low**, **Mid**, **High**, or **Max**.
- **Sync Mode:** This setting determines the degree of synchronization applied when you press the Sync button on your Mixstream Pro hardware:
 - **Bar:** The tempo will be synced, and the track will be automatically bar-matched with the track on the sync lead deck (the downbeats of each bar will be aligned).
 - **Beat:** The tempo will be synced, and the track will automatically beat-matched with the track on the sync lead deck.
 - **Tempo:** Only the tempo will be synced (the BPM will match that of the sync lead deck).
- **Sync Button Action:** This setting determines how the **Sync** button will act when pressed.
 - **Toggle:** This mode allows you to toggle sync on and off without having to hold **Shift**.
 - **Shift Disable:** This mode requires **Shift** to be held in order to turn off sync.
- **Pitch Control Type:** This setting determines the primary function of the Pitch Bend buttons. Select **Pitch Bend** to keep the primary function as momentarily reducing or increasing the pitch, or select **Range** to set the primary function to adjusting the range of the pitch fader. The function not used as the primary will still be available by holding **Shift** and using the **Pitch Bend** buttons.
- **Pitch Bend Behavior:** This setting determines the behavior of the **Pitch Bend** button function. When set to **Fixed**, pressing and holding the **Pitch Bend** buttons changes the speed of the track at a consistent rate. When set to **Progressive**, the longer the **Pitch Bend** buttons are held, the greater the rate of speed change.
- **Key Sync Mode:** This setting determines whether key syncing is **Strict** or **Fuzzy** (default). When set to **Strict**, tracks will only be key synced to the same or relative key (i.e., 7a to 7b). When set to **Fuzzy**, the available compatible keys are increased to include relative keys of the dominant and subdominant keys of the lead track, decreasing the amount of pitch shifting necessary to match two tracks together.

Cues/Loops

- **Cue/Loop Quantization:** This setting determines the degree of quantization for time-based features. Select **1/8** beat, **1/4** beat, **1/2** beat, **1** beat or **4** beats.
- **Paused Hot Cue Behavior:** This setting determines how pads will play their hot cue points. When set to **Momentary**, playback will start from a hot cue point when you press and hold its pad—release the pad to return to the hot cue point. When set to **Trigger**, playback will start from a hot cue point (and continue) when you press and release its pad.
- **Smart Loops:** This setting determines whether or not a manual loop will be automatically expanded or reduced to a conventional length (e.g., 2 beats, 4 beats, 8 beats, etc.) when you set it. Select **On** or **Off**. This setting works independently of the quantization setting.
- **Move Cue To Loop In:** This setting determines whether the song's initial **Cue Point** will automatically be moved to the start of a loop (**On**), or remain at its current point (**Off**).

- **Paused Saved Loop Behavior:** This setting determines the action of saved loops that are paused. When set to **Trigger**, pressing a pad with a saved loop on a paused track will trigger track playback from the point of the active loop. When set to **Enable**, pressing a pad with a saved loop on a paused track will move the playhead to the start of the loop, but the track will remain paused.

Display

- **Reset Played Tracks:** Click **Reset** to reset the played status of all tracks.
- **Track Title:** This setting determines whether track titles are shown as the track's **Filename** or its embedded **Metadata** (tags).
- **Time Format:** This setting determines whether or not pitch adjustment affects how the track time is displayed. When set to **Static**, the track's time corresponds to locations in the track as usual; adjusting the pitch does not affect it. When set to **Dynamic**, the track's time will automatically adjust to account for changes in pitch. For instance, if you set the pitch fader to **-8%**, the track time will increase so it is 8% longer.
- **Track End Warning:** This setting determines how long before the end of a track that your Mixstream Pro hardware will warn you that it is nearing the end by flashing the track overview on the touchscreen.
- **Sync Indicator:** This setting determines whether the **Beat Phase** indicator or **Beat Keeper** indicator is active in Performance View.
- **Waveform Style:** This setting determines the appearance of track waveforms. Select **Tri-Band** for Engine OS waveforms where blue represents bass, green is mid-range, and white is treble. Select **RGB** for software-style waveforms where red represents bass, green is mid-range, and blue is treble.

Note: RGB waveforms and track overviews will be built when loading a track to a deck. Alternatively, you can use Engine DJ software to **Analyze: Get missing analysis data** and reimport your tracks with RGB waveforms.

Safety

- **Lock Playing Deck:** This setting determines whether or not you will be able to load a track to the deck as it is playing. Select **On** or **Off**. When this setting is on, the deck must be paused in order to load a track to it.
- **Needle Lock:** This setting determines whether or not you can tap the **track overview** on the touchscreen to jump to that location in the track during playback. Select **On** or **Off**. You can use the track overview while playback is stopped regardless of this setting.
- **Pad Lock:** This setting determines whether the pads and pad mode buttons are always enabled (**Off**) or disabled (**On**). When disabled, the pads and pad mode buttons will not be lit.

Library

- **Stems List:** Use this option to enable or disable the **Stems** list from appearing in Library view.
Note: Stems support requires a one-time license purchase and activation. See [Stems Mode](#) for more information.
- **Key Notation:** This setting determines how the track key is notated on the touchscreen. You can view the key as all **Sharps**, all **Flats**, **Open Key** or **Camelot**.
- **Key Filter:** This setting determines whether the **Key** filter shows tracks with the same key only (**Match**) or tracks with compatible keys (**Compatible**).
- **BPM Range:** This setting determines the lowest- and highest-possible BPM values that will be used when tracks are analyzed: **58–115**, **68–135**, **78–155**, **88–175** or **98–195 BPM**.
- **BPM Filter Tolerance:** This setting determines the “tolerance” of the **BPM** filter so you can include tracks with tempos that are within a small range of the selected tempo. Select **±0**, **1**, **2**, **3**, **5**, **10**, or **15**.
- **Collection Browse Behavior:** This setting determines browsing behavior when using the Library. When set to **Select**, tapping a playlist or folder will select it, and a double-tap is required to open it. When set to **Open**, tapping a playlist or folder will open it.

Deck Colors

To change the deck color, tap the color box under the name of the deck, and then tap the color to select.

Settings

Device

- **Wi-Fi:** This determines whether Wi-Fi connectivity is enabled (**On**) or disabled (**Off**). Tap the **gear icon** to open the Wi-Fi settings. See [Wi-Fi](#) for more information about the Wi-Fi menu.
- **Bluetooth:** This determines whether Bluetooth connectivity is enabled (**On**) or disabled (**Off**). Tap the **gear icon** to open the Bluetooth settings. See [Bluetooth](#)® for more information about the Bluetooth menu.
- **Time/Date:** This displays the current time and date. Tap **Sync Time** when connected to the internet to automatically sync the time.
- **24 Hour Clock:** This setting determines whether the **Time** uses the 12 Hour Clock (**Off**) or 24 Hour Clock (**On**).
- **Time Zone:** Displays the current time zone, formatted as **Region / City**.
- **Set time zone manually:** Enable this setting and then tap the **gear icon** to manually set your local time zone.
- **Default Scratch Mode:** This determines the default platter scratch behavior. Select **Normal** to default the platters to vinyl mode, allowing you to “scratch” normally as you would with a vinyl record. Select **Smart** to default the platters to **Smart Scratch** mode, where the track will continue playing as you scratch the platters and resume normal playback from where it would have been if you had never moved the platter.
- **Playhead Position:** Use this slider to set the position of the playhead along the track waveform in Performance View.
- **Hide Title/Artist:** Use this setting to enable “trainspotting mode,” which hides the Track Title and Artist from decks in Performance View.
- **Track Preview:** When active, Track Preview will reveal a play button for each song in the library, allowing the songs to be auditioned in the cue without loading a song to the deck. Select **On** or **Off**. When **On**, track preview audio will be routed to the active deck when no tracks are loaded. When tracks are loaded, the preview audio will be routed to the inactive deck.
- **Preview Volume:** Use this slider to set the volume level of the track preview.
- **Screen Saver Time:** This determines if and when the screen saver will turn on after no activity for the selected time: **Off**, **15 mins**, **30 mins**, **60 mins**. While the screen saver is active, the touchscreen display will dim. Interact with the screen or any hardware control to exit the screen saver.
- **Screen Brightness:** This setting determines the brightness of the touchscreen: **Low**, **Mid**, **High**, or **Max**.
- **Screen (Battery)** (Mixstream Pro Go only): This setting determines the brightness of the main display when running on battery power: **Low**, **Mid**, **High**, or **Max**.
- **Encoder Behavior:** This setting determines the default behavior when turning the **Browse** knob while in Performance View. When set to **Open Library**, turning the **Browse** knob will open Library View. When set to **Waveform Zoom**, turning the **Browse** knob will adjust the zoom level of the waveforms in Performance View.

Mixer

- **Sampler Output:** This setting determines where Sampler audio is routed: **Ch 1**, **Ch 2**, or **Main**.
- **Playlist Deck Crossfade Time:** Use this slider to adjust the amount of crossfade between tracks when using the playlist deck.
- **VU Meter Mode:** This setting determines which signal is represented by your Mixstream Pro hardware’s **Main Level Meters**. Select **Main** to use view the Main output level, or select **Channel** to use the Channel level.
- **EQ Type:** This setting determines the type of equalization for the **Channel EQ** knobs. Select **Isolate** for EQ bands with infinite cut for full band “kills,” or select **Normal** for EQ bands with limited cut.
- **Smart Headphone Cue:** This setting enables or disables smart headphone cueing. When set to **On**, once a track is loaded to a deck the headphone cue will automatically be switched to that deck. When set to **off**, cue must be manually set.
- **Cue Solo Mode:** This setting determines how many channels can be sent to the cue mix. Set to **On** to have only one channel at a time in the cue mix, or set to **Off** to cue multiple channels at a time.
- **Sum Main Out To Mono:** This setting enables or disables summing the audio to the **Main Outputs** to a mono signal (**On**). When disabled (**Off**), the audio will be sent in stereo.

Note: This setting does not apply to audio played through the built-in speakers.

FX

Sweep Effects

- **Filter Resonance:** This setting determines the amount of resonance of the filter, from **0** to **15**.

Fader Effects

- **Fader Echo Beats:** This setting determines the time division value for the fader echo (**1/4, 1/3, 1/2, 3/4, 1, 3/2, 2, or 4** beats).
- **Fader Echo Feedback:** This setting determines the amount of echo signal fed back into the delay line, extending the length of repeats (**0–100%**).
- **Disarm After Trigger:** This setting determines whether the fader echo will turn off after each time it is activated (**On**), or whether it remains enabled after being activated (**Off**).

General Settings

- **Effect Select Behavior:** When set to **Default**, all effects settings will return to their default settings when a new track is loaded. When set to **Recall**, effects settings will be retained.
- **Reset Effects to Default Settings:** Tap here to manually reset effects to the default settings.

Mic

- **Send to Speakers:** This setting determines whether the microphone signal is sent to the onboard speakers (**On**) or not (**Off**).
- **Send to Headphones:** This setting determines whether the microphone signal is sent to the headphone outputs (**On**) or not (**Off**).
- **Mic EQ:** These settings allow you to adjust the **Treble, Mid, and Bass** equalization for the microphone signal, from **-15.0** to **6.0 dB**.

Services

- **Sync:** This determines whether Ableton Link is enabled (**On**) or disabled (**Off**). Ableton Link synchronizes beat, phase, and tempo of Ableton Live and Ableton Link-enabled applications over a wireless or wired network. All Link-enabled devices must be connected to the same local network.

Use the **Ableton Link Offset** slider to compensate for phase effects. You can adjust the offset between **-200** and **200 ms**.

- **Streaming:** Use these options to enable or disable connections to streaming service partners. When set to **On**, the selected service will be available in the **Source** menu.
- **Cloud:** Use this option to retrieve your Engine library database from a cloud storage service. You must first use the Engine DJ software to back up your database. Then, when this option is set to **On**, the selected service will be available in the **Source** menu and you can access these files over an established internet connection.

Note: We recommend using only high-quality, name brand USB 3.0 or Class U1 or U3 SD cards as source drives, especially when cloud services are enabled.

About / Update

This page displays the product name, current firmware version, and other device information.


- **Firmware Update Mode:** If you are not running the latest firmware, tap **Options** to restart Mixstream Pro in Update Mode, which enables you to update its firmware. Follow the firmware update instructions included with the firmware update package you downloaded.
- **Send Anonymous Usage Statistics:** This determines whether or not your usage statistics will be sent occasionally to us, enabling us to improve the Mixstream Pro hardware experience.
- **Legal:** Tap here to view the inMusic Brands EULA and patent list.
- **Factory Reset:** Tap here to restore the default factory settings for your device.

Source

The Source menu allows you to select a connected media device, streaming service or cloud service for use with your Mixstream Pro hardware.

When the Source menu is open, all connected hardware media sources will be shown in the top part of the display. New sources that are available to connect to are shown at the bottom of the display.

To select a drive as a media source, tap the device name. The currently selected source device, if any, will be outlined. The currently selected recording device, if any, will show a **Rec icon** next to its name.

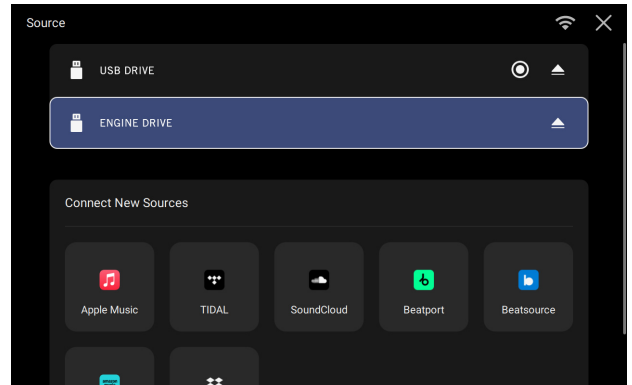

To select a streaming or cloud service as your source, tap the streaming or cloud service name. If you have not set up a connection to the service yet, you will be prompted to sign in with your username and password or given a web link and code in order to activate your device. Once signed in or activated, you can use the streaming or cloud service to browse and add tracks. Streaming and cloud services may be enabled or disabled in the [Settings > Services](#) menu.

Note: Apple Music and Amazon Music are available with Mixstream Pro + and Mixstream Pro Go only.

Connection to Amazon, Apple Music, Tidal, and SoundCloud must be enabled using your Engine DJ Profile, at enginedj.com.

Both Apple Music and Amazon Music can download up to one track at a time. Amazon Music allows for simultaneous streaming of up to two tracks, including tracks loaded to decks or previewed from the library. Apple Music allows for simultaneous streaming of up to four tracks.

To open *Wi-Fi* connection menu, tap the **Wi-Fi icon** at the top of the display.

To eject a drive source, tap the **eject icon** next to the drive name. If a track from the selected source is currently in use, an alert will appear to note that the tracks will be unloaded. Tap **Eject Anyway** to continue or tap **Cancel** to return to the Source menu.

To exit the Source menu, tap the **X** at the top-right of the display. Alternatively, press the **View** button.

Engine Remote Library

In addition to connected devices, streaming services, and cloud services, you can also connect to an instance of the Engine DJ software running on a computer sharing the same network as your Mixstream Pro hardware. This allows you to browse and load tracks from your complete library without having to pack files to a portable drive.

To access your Engine Remote Library:

1. First, make sure your hardware and your computer are on the same network, and the Engine DJ software is opened. This can be done by connecting to the same Wi-Fi network, or by connecting directly using an Ethernet cable.
2. Open the **Source** menu from your hardware, and locate your computer under the **Connect New Sources** section.
3. Tap to select the computer, and your hardware will show “Waiting for confirmation” while another message appears in the Engine DJ software asking to accept or deny access to your hardware. Click **Accept** to approve and continue.

If the connection process is canceled, or if the connection is lost, both libraries will return to their previous selections.

4. Once the connection is established, you will be able to browse and load tracks from your Engine DJ software collection directly from your hardware.
5. When you load a track from the Engine Remote Library, the track will begin downloading over the network. The download progress will be shown on your hardware touchscreen. If the download fails, a “Failed to Download” message will appear on your hardware. You can remotely load tracks up to 250 mb in size.

Tracks will download with any performance data associated with the file in your Engine DJ software collection. This includes beat grids, saved cues, and saved loops. If no beat grid information is included with the downloaded track, your Mixstream Pro hardware will analyze the file once it is loaded.

Any edits made to performance data, track metadata, and playlists from your Mixstream Pro hardware or Engine DJ software will automatically sync to the other.

Wi-Fi

The Wi-Fi menu allows you to connect to a local internet network so you can browse connected streaming and cloud services.

To enable Wi-Fi, tap the **Wi-Fi switch** at the top of the page. Once enabled, a list of local networks will appear on the display.

To establish a connection, tap the desired network name. If a password is required, you will be prompted to enter it. Once a connection is established, **Connected** will appear next to the network name.

To view information about the network, tap the **three-dots icon** next to the network name. **Tap Close** or anywhere outside the menu to close the Wi-Fi information menu.

A Wi-Fi connection menu will also appear when your EngineOS hardware is powered on. On this page:

To enable Wi-Fi, tap the **Wi-Fi switch** at the top of the touchscreen.

To establish a connection, tap the desired network name. If a password is required, you will be prompted to enter it. Once a connection is established, the page will be dismissed.

To view information about the network, tap the three-dots icon next to the network name.

To dismiss this page, tap **Next** at the top of the touchscreen.

To prevent this page from appearing each time your hardware is powered on, tap the **Do not show again at startup** box so it is checked.

Bluetooth®

The Bluetooth page allows you to connect to a Bluetooth audio input for streaming, a Bluetooth audio output, or a Bluetooth keyboard for searching tracks.

To enable Bluetooth, tap the **Bluetooth switch** at the top of the page. Once enabled, a list of devices will appear on the display. You can also enable Bluetooth from the [Settings > Device](#) menu.

To link to an available device:

1. First, make sure your Bluetooth device is powered on, in range, and available for pairing. You should see the name of your device in the **Available Devices** list if it is ready to pair.
2. Select your device from the list of **Available Devices**. The first time you connect a device, you will be prompted with a passcode to confirm on both Mixstream and Bluetooth devices.

Alternatively, for audio input devices such as smartphones or tablets, navigate to the Bluetooth Settings screen on your device. Then, locate the Mixstream device you would like to pair to and select it.

3. Once successfully linked, your device will appear in the **Linked Devices** list. You can then easily reconnect to this device at any time.

Mixstream will automatically determine whether your device is used as an input or output. If your device supports both, a dialog will display to ask you to select one type. You can change this at any time using the **three-dots icon**.

To view device settings, tap the **three-dots icon** next to the device name.

The **Auto Connect** setting determines how your devices reconnect. When this setting is **On**, a device you have previously paired with your Mixstream hardware will automatically reconnect when Bluetooth is enabled and the device is in range. When set to **Off**, you will need to manually reconnect each time.

The **Status** field displays the current connection status.

The **Connection** field allows you to manage your device connection. Tap **Disconnect** to unlink from a connected device. Tap **Forget** to remove a device from the **Linked Devices** list.

Tap **Close** or anywhere outside the window to close the Bluetooth device settings window.

When paired to an audio input device, use the **Assign Input To** field to select where the Bluetooth audio input will be streamed to: **None**, **Deck 1–2**, or **Main Out**.

When a **Deck** is selected as the Bluetooth audio assignment, you will be able to view Bluetooth track information and play, pause, and skip tracks from your device in Performance View when viewing the selected Deck.


Note: Certain applications may not support track information and performance controls when used with Mixstream devices.

When **Main Out** is selected as the Bluetooth audio assignment, audio will be routed directly to the Main Output. You can play, pause, and navigate tracks on your Bluetooth device.

Use the **Bluetooth Device Volume** slider to adjust the Bluetooth audio input device level.

When paired to an audio output device, use the **Main Level** control to adjust the output volume.

Note: Bluetooth audio may transmit with a small amount of audio latency. Particularly if you are using both wired and wireless audio output at the same time, you may notice a slight delay between the two signals. For best results, ensure you are operating within the specified range of your Bluetooth device, and with clear line of sight. Additionally, remove or disable any devices that may cause interference with the Bluetooth signal.

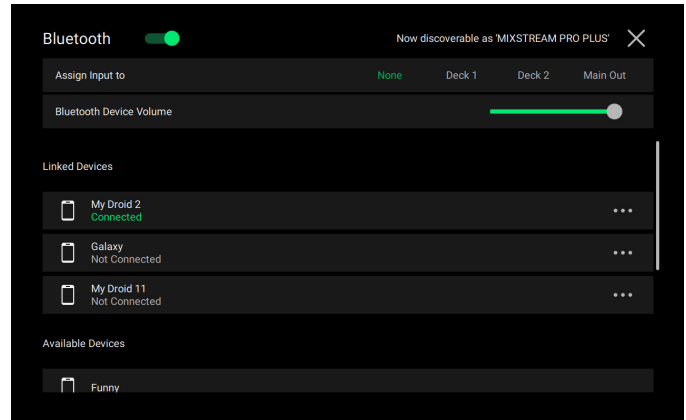

Record

Select the media device destination that you will use to save your recording. The currently selected source device will show **Source** next to its name. Once you have selected the recording device, you can begin recording your session.

To begin recording, tap **Start**. The timer on the touchscreen will show the total length of time recorded.

To pause recording, tap **Pause**.

To resume recording when paused, tap **Resume**. Your Mixstream Pro hardware will continue recording your session from where you pressed pause.

To stop recording, tap **Stop**. Once recording is stopped, you will have the option of saving the file to your device.

To clear the recording, tap **Clear**. A warning screen will be shown before the file is deleted. Tap **Yes** to continue, or **No** to return to the previous page to save the recording.

To save the recording to your drive, tap **Save As**. A keyboard will appear where you can title your file. Tap **Done** to finish and save your file, or tap **Cancel** to return to the previous page.





You can also use the **Maximize Recording Volume** option to normalize your audio recording at -1 dBFS. This may take some time, depending on the length of your recording. This option is enabled by default.

A success message will be shown on the display when the operation is complete. Tap **OK** to continue, or wait a few seconds and you will be returned to the Record menu.

Recorded files will be saved in a folder called **Sessions** on your media device. You can access these recordings from your Mixstream Pro hardware under the **Files** section of the **Library**.

To move back a page or return to the previous page, tap the **back arrow (<)**.

To exit the Record menu, tap the **X**. Alternatively, press the **View** button.

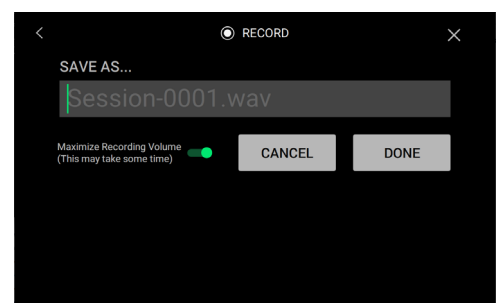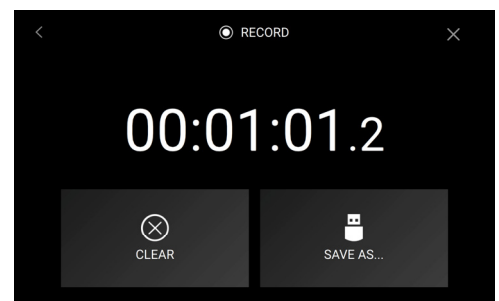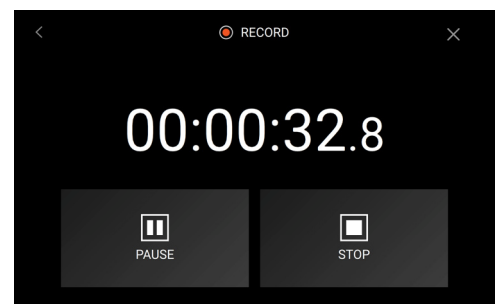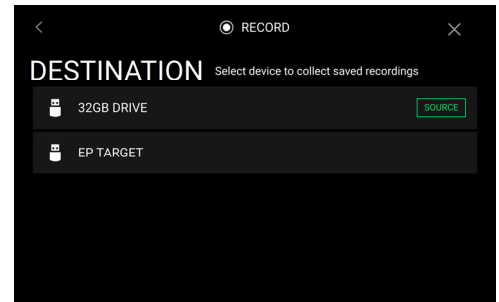

Engine Lighting

The Engine Lighting menu allows you to control connected lighting devices such as DMX fixtures and Smart Lights using SoundSwitch to seamlessly sync your music and lights.

To open Engine Lighting control, press the **Lighting** button. You can also tap the **Lighting** button in the **Control Center** or double-press the **View** button.



The first time you use Engine Lighting, you can select a **Basic** or **Pro** layout for performing:

Basic: A simple interface for controlling Smart Lights, Control Color, Blackout and Strobe Lighting FX.

Pro: Full control of all lighting effects for both DMX and Smart Lights, Control Movements, Strobe and more.

You will also be prompted if you want to connect Philips Hue or Nanoleaf Smart Lights when you first use Engine Lighting. This can also be configured later through the Engine Lighting **Preferences** menu.

Visit soundswitch.com for more information on using SoundSwitch lighting controls with your hardware.

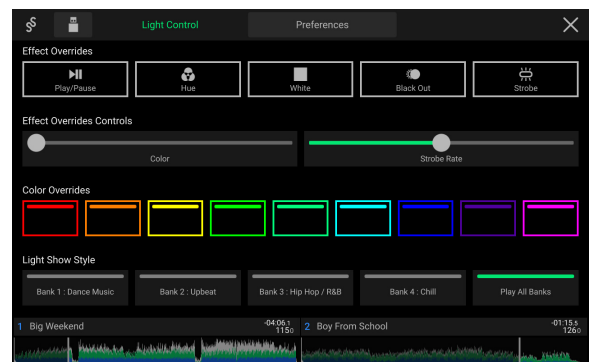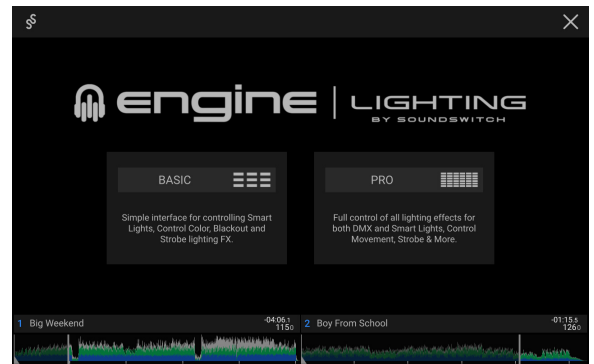

Basic View



Pro View

Preferences

Tap the **Preferences** tab at the top of the touchscreen to open the Engine Lighting settings.

General

- **Engine Lighting Status:** This setting displays the current connection status to Engine Lighting devices. When **Running** is shown, Engine Lighting is active. Tap **Stop** to deactivate Engine Lighting. Tap **Start** to reactivate.
- **Sync Offset:** Use this slider to apply a time offset for syncing your connected lights, from **-1** to **0** to **+1** seconds.
- **Show Advanced Controls:** Enable this option to toggle between the **Basic** and **Pro** controls.
- **Randomize Autoloops:** This setting determines whether autoloops are randomized or play in order.
- **Override Scripted Tracks:** This setting determines whether a scripted track that is paired with an audio file is used (**Off**) or whether you can override it using the onboard controls (**On**). This setting takes effect after loading the next track.
- **Loop Auto Strobe:** This setting allows you to automatically generate strobe effects when a Loop Roll is engaged, or when Auto Loop is set to smaller than 1 Beat.
- **Broadcast Art-Net:** This setting allows you to enable or disable sending Art-Net protocol to control DMX interfaces over a network connection.
- **Strobes:** This setting determines whether strobe effects are enabled or disabled.
- **Philips Hue:** Enable this option to connect to available Philips Hue smart devices.
- **Nanoleaf:** Enable this option to connect to available Nanoleaf devices.
- **Fader Mode:** This setting determines whether the light show changes continuously when both the crossfader and channel faders are moved (**Blend**) or only by the position of the channel faders (**Upfader Only**).
- **Repeat Autoloops Mode:** This setting determines whether autoloops are continuously repeated (**Infinite**) or repeated for the **Track Duration** only.
- **Version:** Displays the current Engine Lighting version.

DMX Interfaces

Use this screen to view connected DMX interfaces and their Universe Assignments.

Philips Hue

Use this screen to set up Philips Hue devices.

Nanoleaf

Use this screen to set up Nanoleaf devices.

Appendix

FX Parameters

BPM FX

Echo	Parameter	Value Range
This effect adds echoes of the original signal.	Beats	1/32, 1/16, 1/8, 1/4, 1/3, 1/2, 3/4, 1, 3/2, 2, 3, 4
	Feedback	0–100%
	Frequency	<60 Hz – <18.2 kHz, All Bands, >60 Hz – >18.2 kHz
	Amount	0–100%

Delay	Parameter	Value Range
This effect adds repeated instances of the original signal that decay over time.	Beats	1/32, 1/16, 1/8, 1/4, 1/2, 3/4, 1, 2, 3, 4
	Frequency	<60 Hz – <18.2 kHz, All Bands, >60 Hz – >18.2 kHz
	Amount	0–100

Flanger	Parameter	Value Range
This effect adds a slightly delayed copy of the original signal to create a comb-filter effect (often referred to as resembling a jet plane engine).	Beats	1/16, 1/8, 1/4, 1/2, 3/4, 1, 2, 4, 8, 16, 32
	Feedback	0–100%
	Frequency	<60 Hz – <18.2 kHz, All Bands, >60 Hz – >18.2 kHz
	Amount	0–100%

Phaser	Parameter	Value Range
This effect adds a copy of the original signal with its phase shifted slightly to create a subtle, modulatory effect.	Beats	1/16, 1/8, 1/4, 1/2, 1, 2, 4, 8, 16, 32, 64
	Feedback	0–100%
	Frequency	<60 Hz – <18.2 kHz, All Bands, >60 Hz – >18.2 kHz
	Amount	0–100%

Touch FX

Filter Echo	Parameter		Value Range
This effect adds echoes of the original signal with an additional filter.	X-Axis	Beats	1, 3/4, 1/2, 1/4, 1/8, 1/16
	Y-Axis	Filter	Lo-Hi
		Amount	0-100

Filter Reverb	Parameter		Value Range
This effect adds filtered reverberation to the original signal.	X-Axis	Amount	0-100
	Y-Axis	Filter	Lo-Hi
		Room Size	0-100

Filter Roll	Parameter		Value Range
This effect samples the current audio signal and repeats it at a regular rate based on the current time division, with an additional filter.	X-Axis	Beats	2, 1, 1/2, 1/4, 1/8, 1/16, 1/32
	Y-Axis	Filter	Lo-Hi
		Resonance	0-100

LFO Echo	Parameter		Value Range
This effect adds echoes of the original signal, with a filter cutoff frequency varied at a regular rate.	X-Axis	Beats	8, 4, 2, 1, 3/4, 1/2, 1/4, 1/8
	Y-Axis	Resonance	0-100
		Feedback	0-100

Technical Specifications

Main Outputs		
Frequency Response	20 Hz – 20 kHz +/- 1 dB	
Dynamic Range	> 114 dB (A-weighted)	
Signal-to-Noise Ratio	> 94 dB (A-weighted)	
Headroom	Mic	> 16 dB
	Outputs	> 16 dB
Channel Separation	< -110 dB (1 kHz, unity)	
T.H.D.	Line	< 0.01% (1 kHz, unity)
	Microphone	< 0.05% (1 kHz, unity)

Speakers	
Frequency Response	20 Hz – 20 kHz +/- 1 dB

General		
Analog Input	Microphone	-40 dBu (unity)
		-60 dBu (minimum)
Analog Output	Main, Balanced	+20 dBu (maximum) +4 dBu (unity)
	Main, Unbalanced	+16 dBu (maximum) 0 dBu (unity)
	Headphone Output	< 30 mW
Playable Media	Type	SD, SDHC, SDXC card USB mass-storage devices (flash memory, external HDD enclosures)
		File Systems
	File Formats	AAC/M4A AIF/AIFF (44.1–192 kHz, 16–32-bit) ALAC FLAC MP3 (32–320 kbps) MP4 Ogg Vorbis WAV (44.1–192 kHz, 16–32-bit)

Connections	Audio Outputs	2 XLR outputs (main left/right, balanced) 1 RCA output pair (main left/right, unbalanced) 1 1/4" (6.35 mm) stereo output (headphones) 1 1/8" (3.5 mm) stereo output (headphones)
	Audio Inputs	1 1/4" (6.35 mm) microphone input
	Other	2 USB port (for USB drives) 1 USB port (to computer) 1 SD card slot 1 power adapter input
Display	Full color LED-backlit display with touch interface 7" / 178 mm (diagonal)	
Wi-Fi	Frequency	2.4 GHz / 5 GHz
	Standard	802.11a/b/g/n/ac
	Power	+17 dBm
Bluetooth Version	5.0	
Power	Connection: DC, Center Positive Voltage: 12.0 V, 3.0 A (Mixstream Pro, Mixstream Pro+) or 19 V, 3.42 A (Mixstream Pro Go)	
Dimensions <small>(width x depth x height)</small>	22.3" x 11.2" x 2.9"	
	566 x 284 x 74 mm	
Weight	8.11 lbs. / 3.68 kg	

Specifications are subject to change without notice.

Trademarks & Licenses

Numark is a trademark of inMusic Brands, Inc., registered in the U.S. and other countries.

macOS and Apple Music are trademarks of Apple Inc., registered in the U.S. and other countries.

SD, SDHC and SDXC are registered trademarks of SD-3C, LLC.

The *Bluetooth* word mark and logos are owned by the Bluetooth SIG, Inc., and any use of such marks by Numark is under license.

Windows is a registered trademark of Microsoft Corporation in the United States and other countries.

All other product names, company names, trademarks, or trade names are those of their respective owners.

The following technologies are used in Engine OS products:

ELASTIQUE efficient V3 by zplane.development

TONART V3 by zplane.development

This product uses other software and technology under license. Please visit enginedj.com/product-legal for a complete list.

numark.com
